



Rear Combination Light Assembly

LIGHTING SYSTEM

16. Rear Combination Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the two bolts, and then detach the rear combination light after disconnecting the connector.

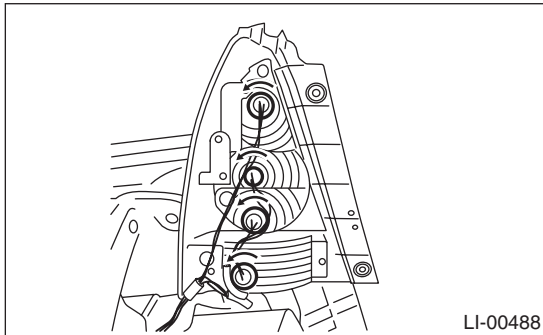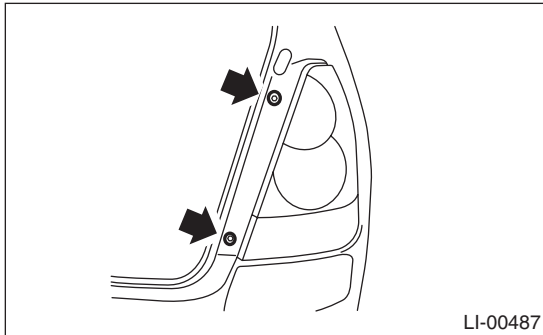

B: INSTALLATION

Install in the reverse order of removal.