

Airbag Connector

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)


4. Airbag Connector

A: PROCEDURE

Buckle switch

1) How to disconnect

- (1) Move the slide lock (A) in the direction of arrow.
- (2) With the slide lock (A) moved, disconnect the connector.

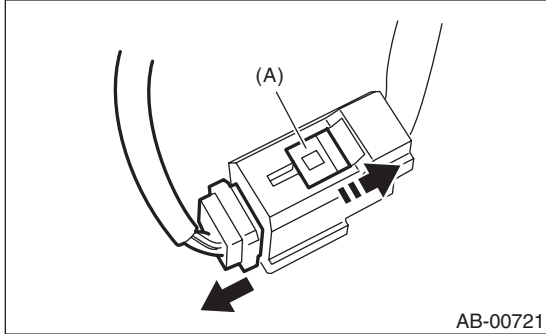


CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect

Holding the connector (A), and push it in carefully until a clicking sound is heard.

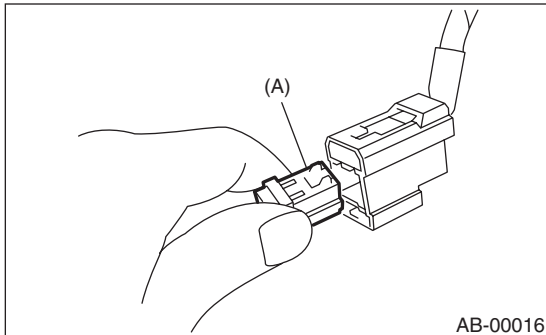

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.