



7. Front Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim. <Ref. to EI-34, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-29, REMOVAL, Front Inner Remote.>
- 5) Remove the two bolts and one nut to remove the guide rail.

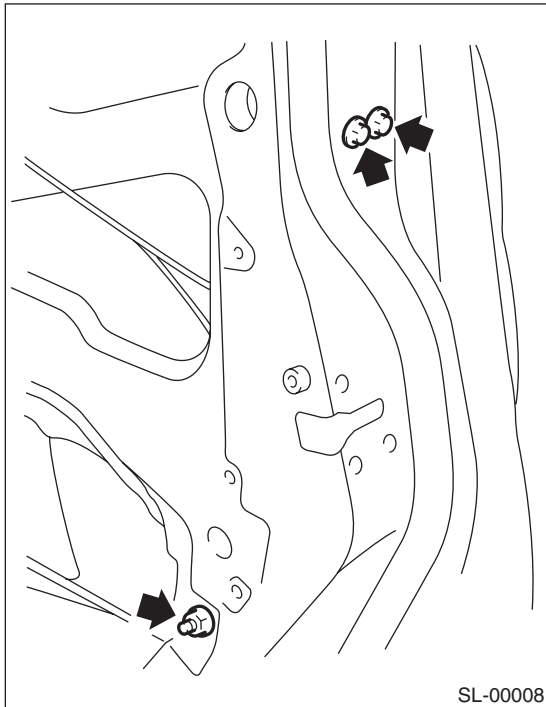

- 6) Remove the three screws and one bolt.

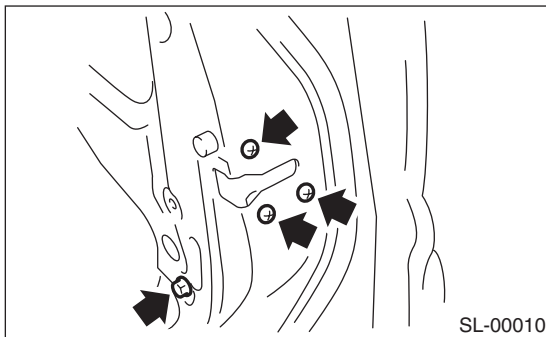

- 7) Remove the front door latch assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Door latch mounting screw

6.5 N·m (0.66 kgf-m, 4.8 ft-lb)

Door lock actuator mounting bolt

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.