

10.Rear Outer Handle

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-35, REMOVAL, Rear Door Trim.>

CAUTION:


Do not apply excessive force to remove the door trim. This can deform the door panel.

2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>

3) Remove the rear inner remote. <Ref. to SL-33, REMOVAL, Rear Inner Remote.>

4) Remove the rear door latch assembly. <Ref. to SL-35, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>

5) Remove the two bolts, and then detach the rear outer handle.

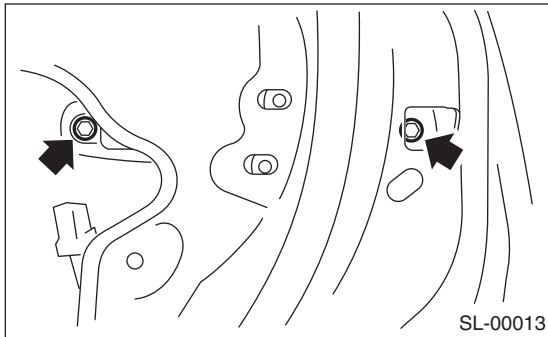

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION

1) Make sure there are no cracks, breakage, and damage on plastic lever.

2) Make sure the plastic lever moves smoothly.