

19. Key Lock Cylinders

A: REPLACEMENT

1. FRONT DOOR

- 1) Remove the door trim. <Ref. to EI-34, REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Completely close the front door glass.
- 4) Remove the rod clamps (A) and lock plate (B).
Replace the key cylinder.

NOTE:

Replace the lock plate (B) with a new part.

