


26. Immobilizer Control Module

A: REMOVAL

NOTE:

- Prepare the security ID plate.
 - Prepare all registered immobilizer keys for the model with immobilizer.
 - When replacing the immobilizer control module, register the immobilizer. At that time, a new immobilizer key is required. Refer to the REGISTRATION MANUAL FOR IMMOBILIZER.
 - If not replacing the immobilizer control module, re-registration of a key used before is not required.
 - If not replacing the immobilizer control module, a maximum of four keys, including the added key, can be registered.
- 1) Disconnect the ground cable from the battery.
 - 2) Remove the instrument panel lower cover. <Ref. to EI-39, REMOVAL, Instrument Panel Assembly.>
 - 3) Disconnect the connector from immobilizer control module.
 - 4) Remove the immobilizer control module.

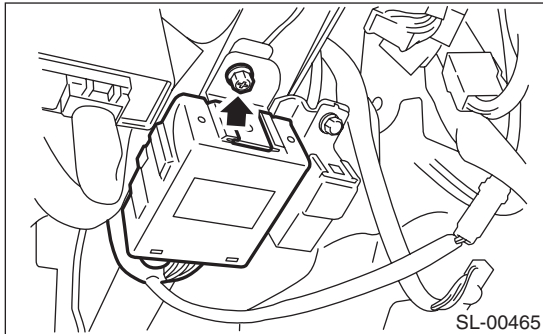

B: INSTALLATION

Install in the reverse order of removal.