


Rear Wiper Motor

WIPER AND WASHER SYSTEMS


10.Rear Wiper Motor

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear wiper arm.
- 3) Remove the cap (A), nut (B), and spacer (C) from rear wiper shaft.

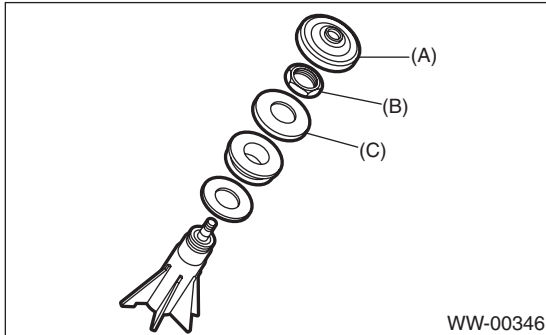


- 4) Remove the rear gate lower trim. <Ref. to EI-47, REMOVAL, Rear Gate Trim.>
- 5) Unclip the clip of harness and disconnect connector of wiper motor.
- 6) Loosen the bolts to remove the wiper motor assembly (A).

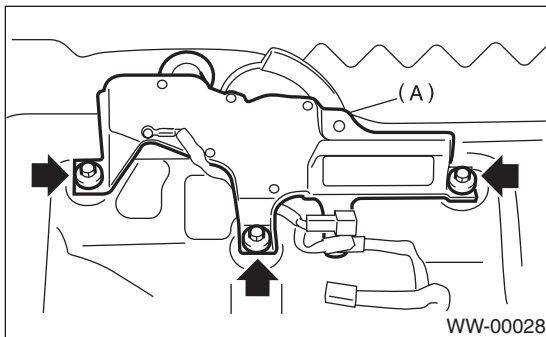

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Install the rear wiper cushion with the arrow mark facing up, as shown in the figure.

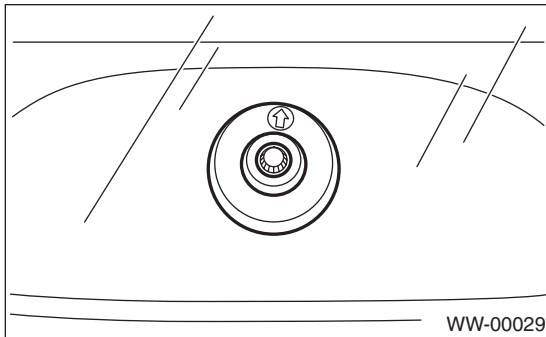


Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to WW-3, REAR WIPER, COMPONENT, General Description.>

C: INSPECTION

- 1) Connect the battery to the wiper motor connector and confirm that wiper motor operates.

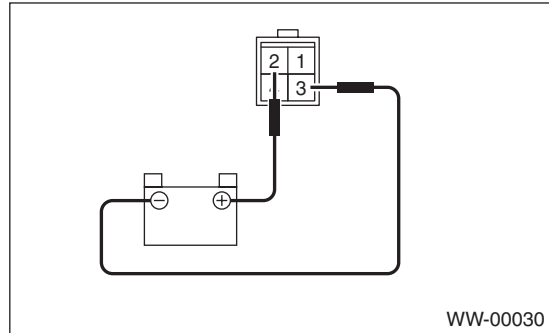

- 2) Connect the battery to terminals of the connector, and remove the terminal connection with motor rotating, and stop the wiper motor in mid-operation.

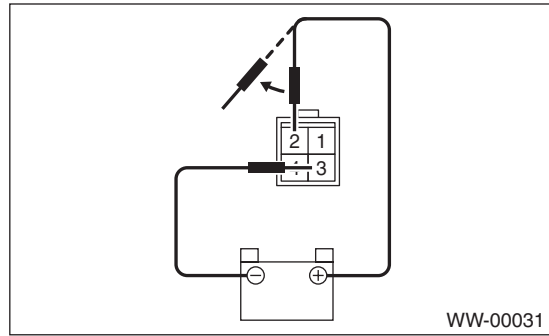

- 3) Connect the battery and confirm that the motor stops at the automatic stop position after the motor operates at low speed again.

