



- MAIN FUSE BOX (M/B)
- A: (F37) E: (F36)
 - B: (B143) F: (F70)
 - C: (F35) G: (B145)
 - D: (B144) H: (B186)

Legend:

- BATTERY CURRENT
- CURRENT FROM IGNITION SWITCH "IG" TERMINAL
- CURRENT FROM IGNITION SWITCH "ACC" TERMINAL
- OTHER CURRENTS
- BUS BAR

