


48. Remote Engine Start System

A: WIRING DIAGRAM

1. NON-TURBO MODEL

1a

1a

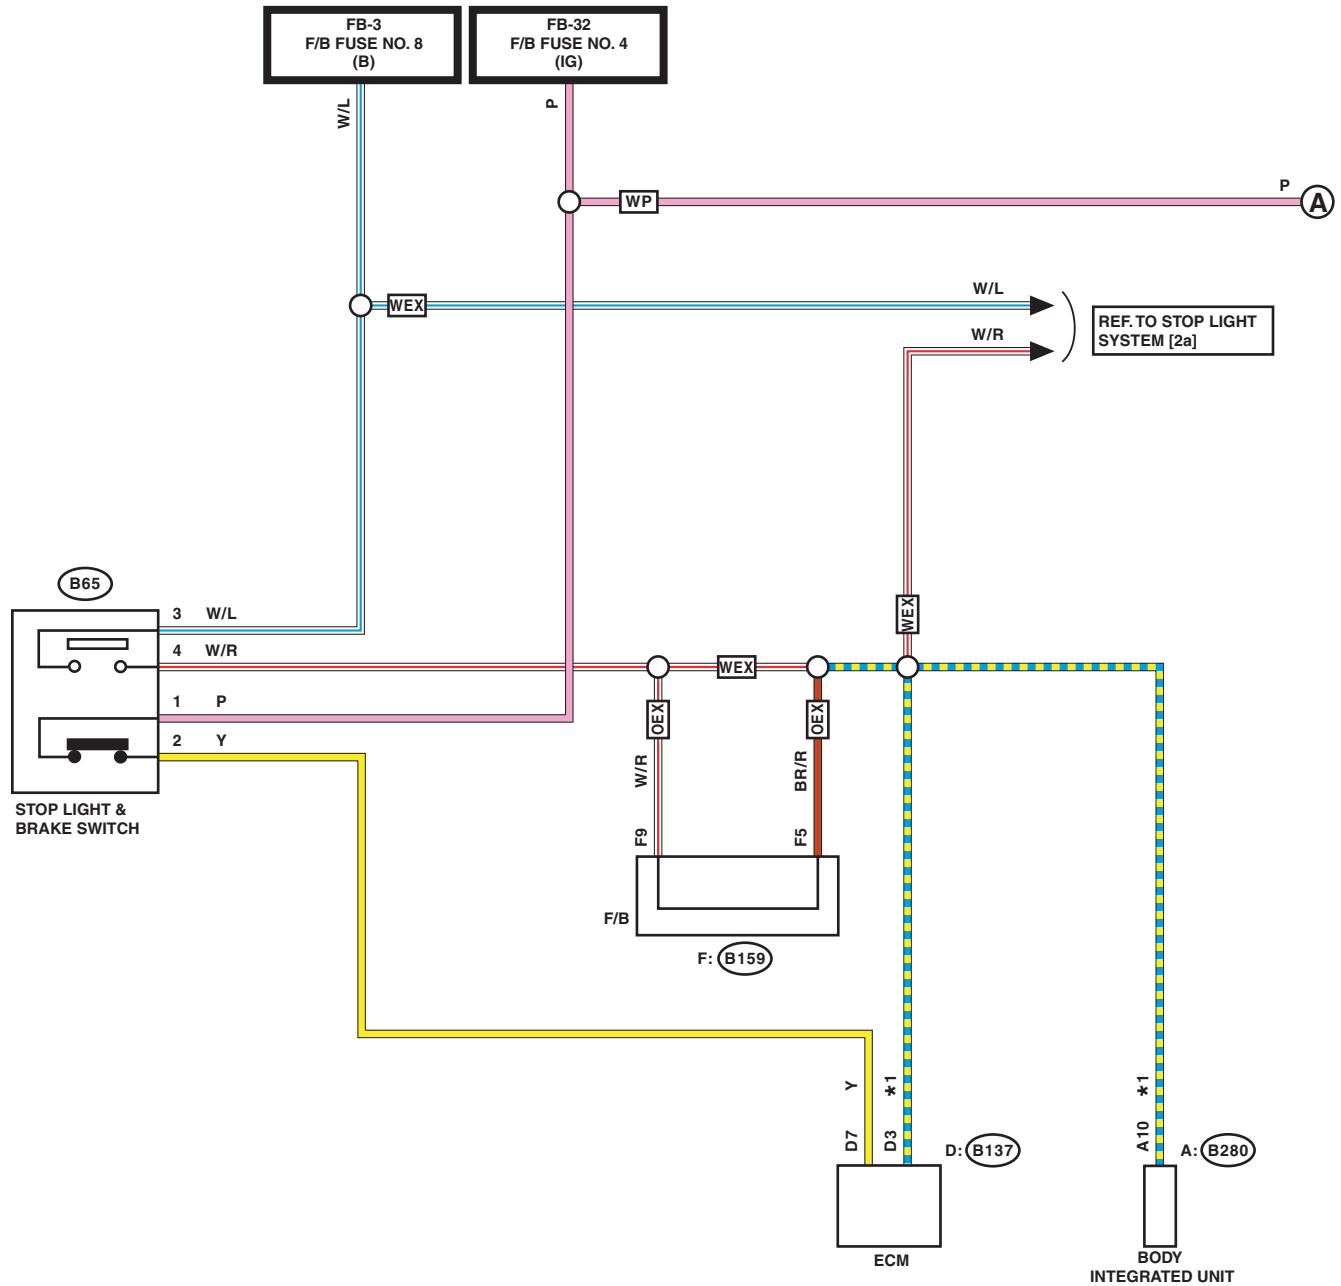

OEX : EyeSight MODEL WITHOUT X MODE
WEX : EyeSight MODEL WITH X MODE
WP : WITH PUSH BUTTON START


*1 : EyeSight MODEL WITHOUT X MODE : BR/R
 EyeSight MODEL WITH X MODE : W/R

Remote Engine Start System

WIRING SYSTEM

1b

1b

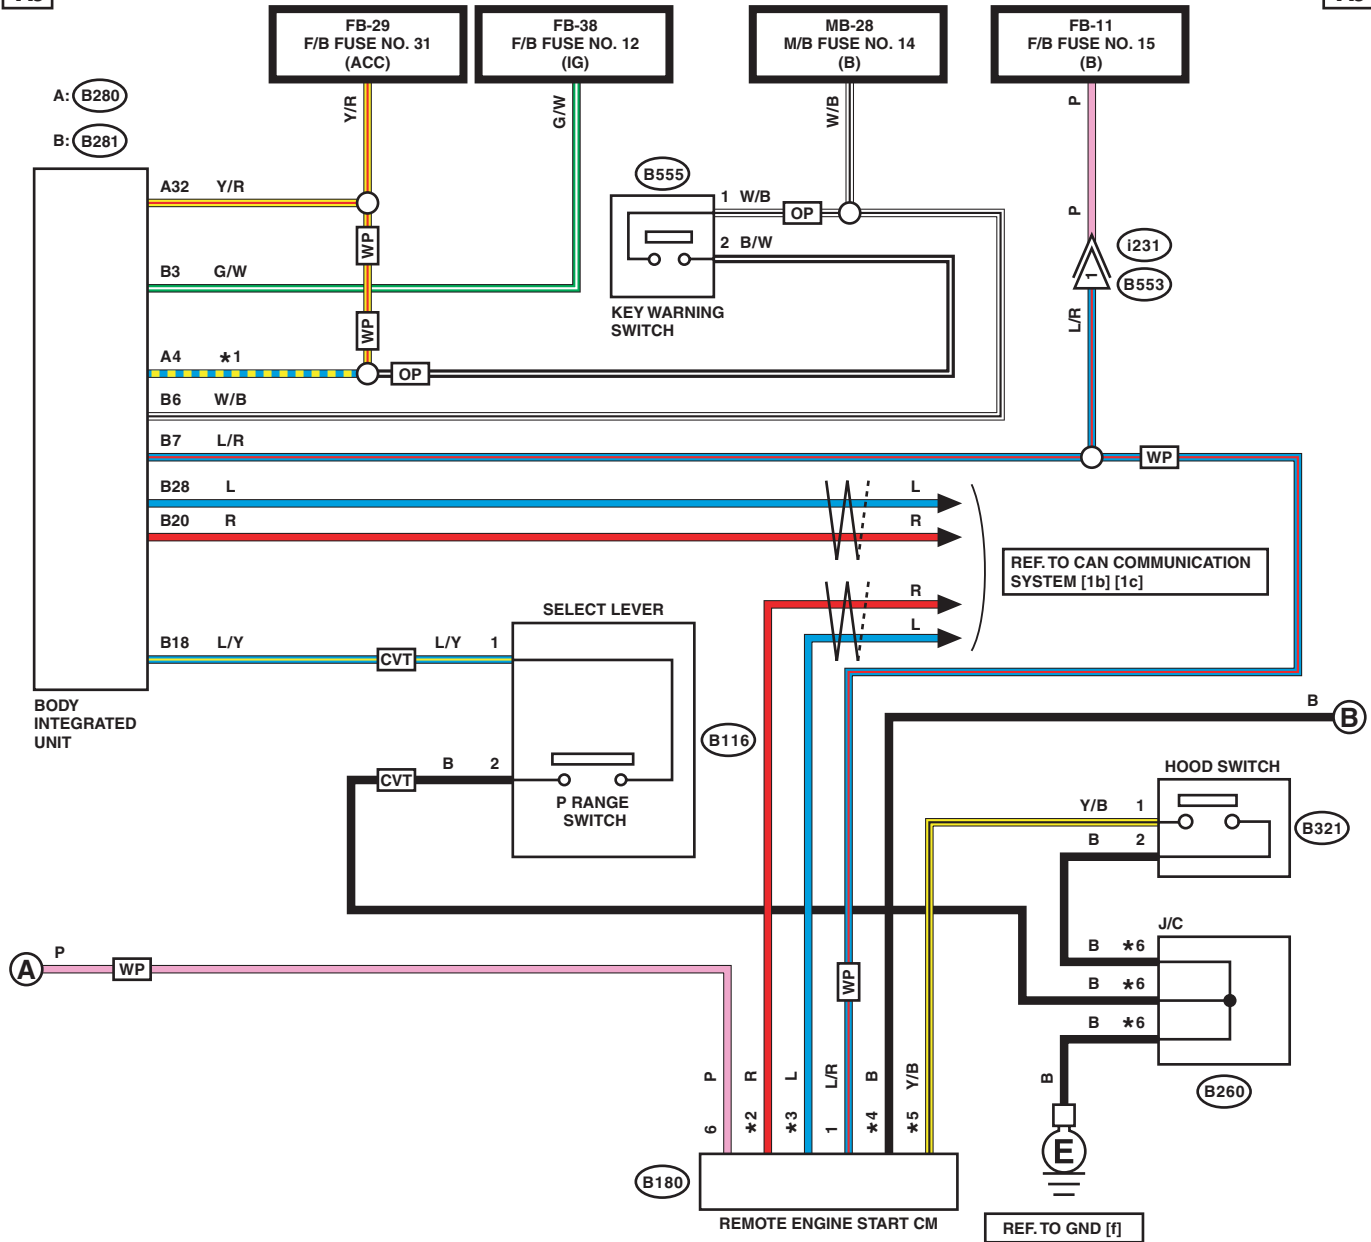

WI-40931


Remote Engine Start System

WIRING SYSTEM

1d

1d

LIST OF CONNECTORS

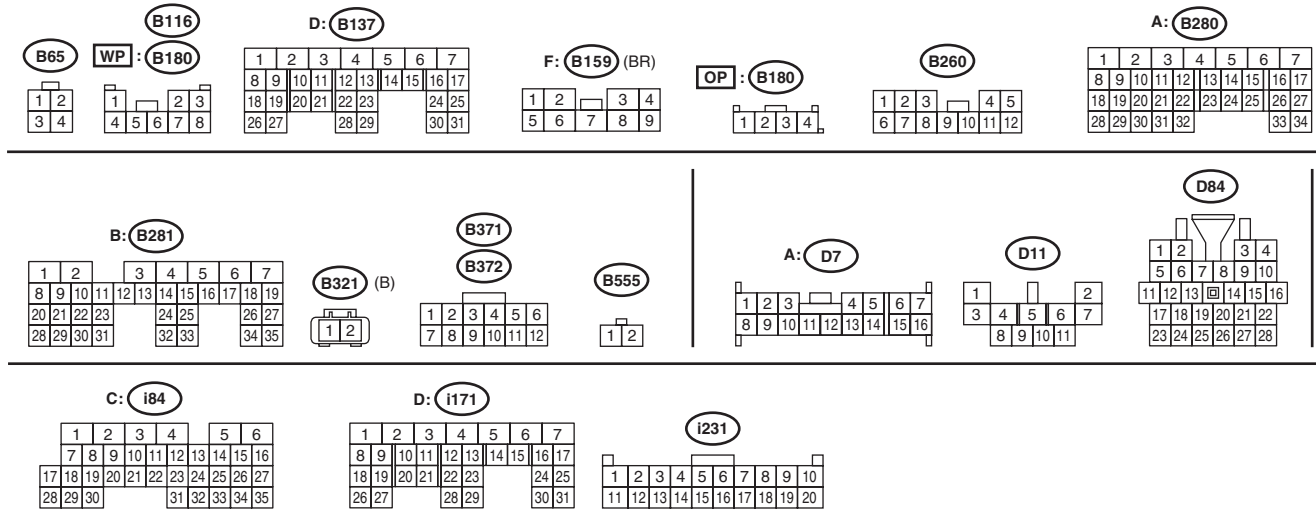

OP : WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START

WI-40933


Remote Engine Start System

WIRING SYSTEM

2. TURBO MODEL

2a

2a

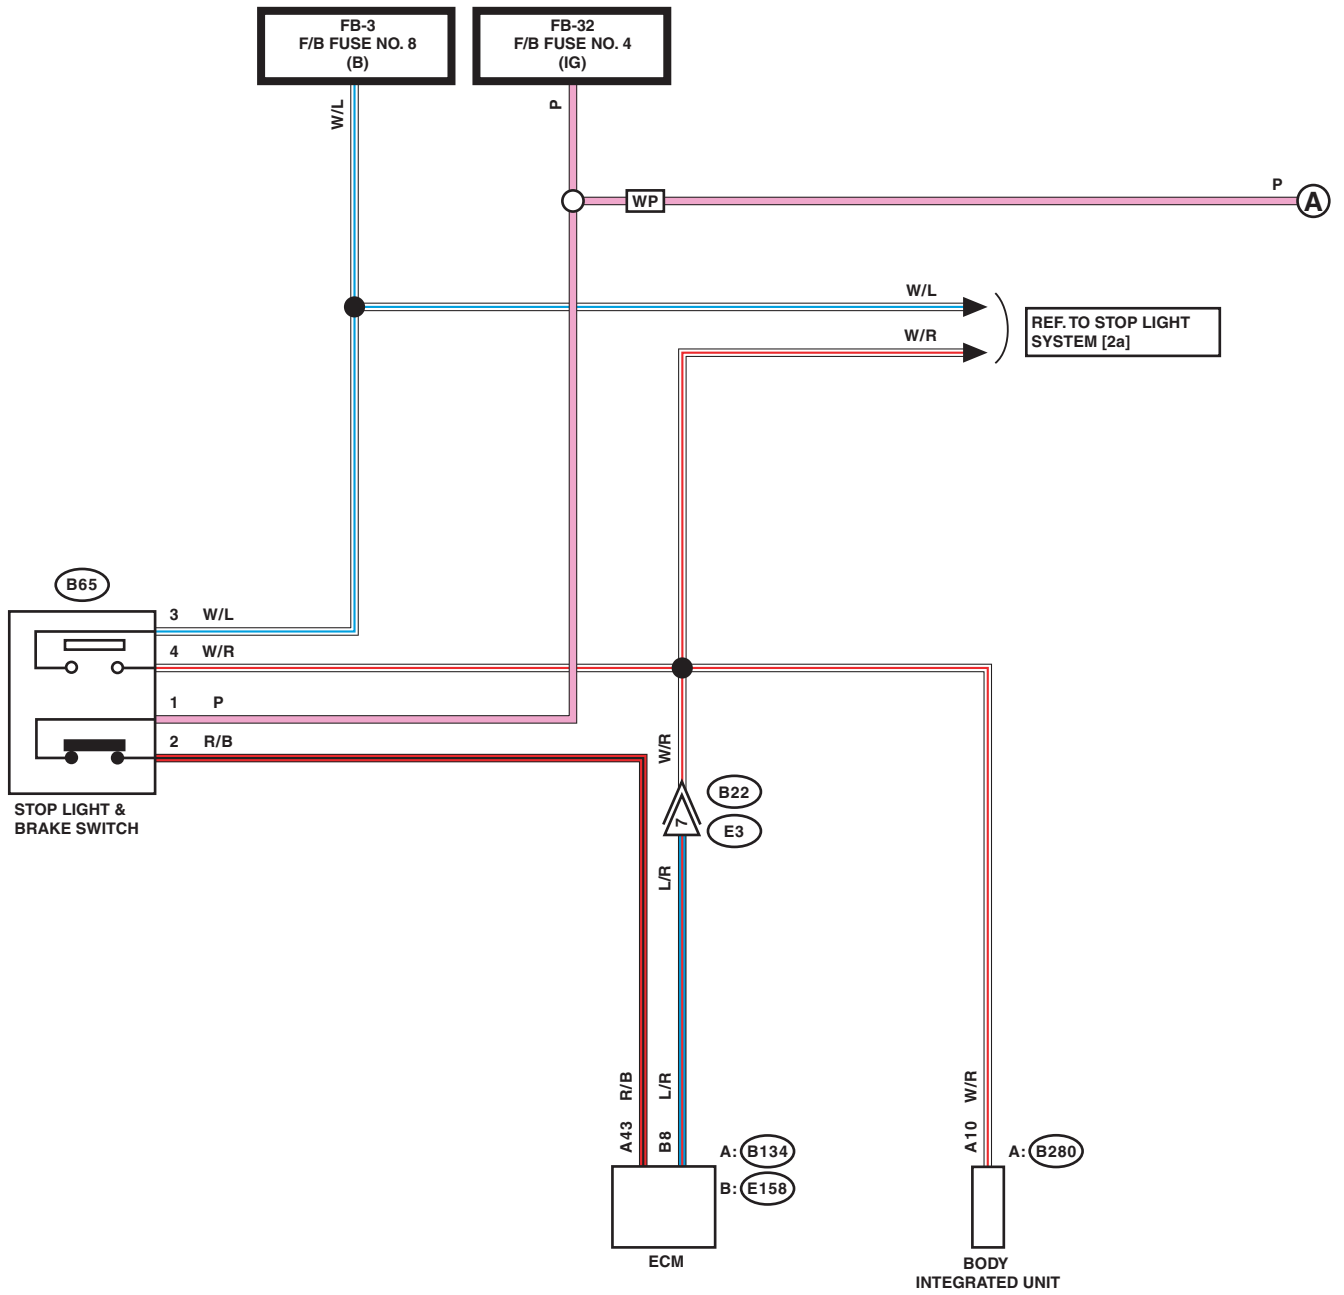

WP : WITH PUSH BUTTON START


WI-40934

Remote Engine Start System

WIRING SYSTEM

2b

2b

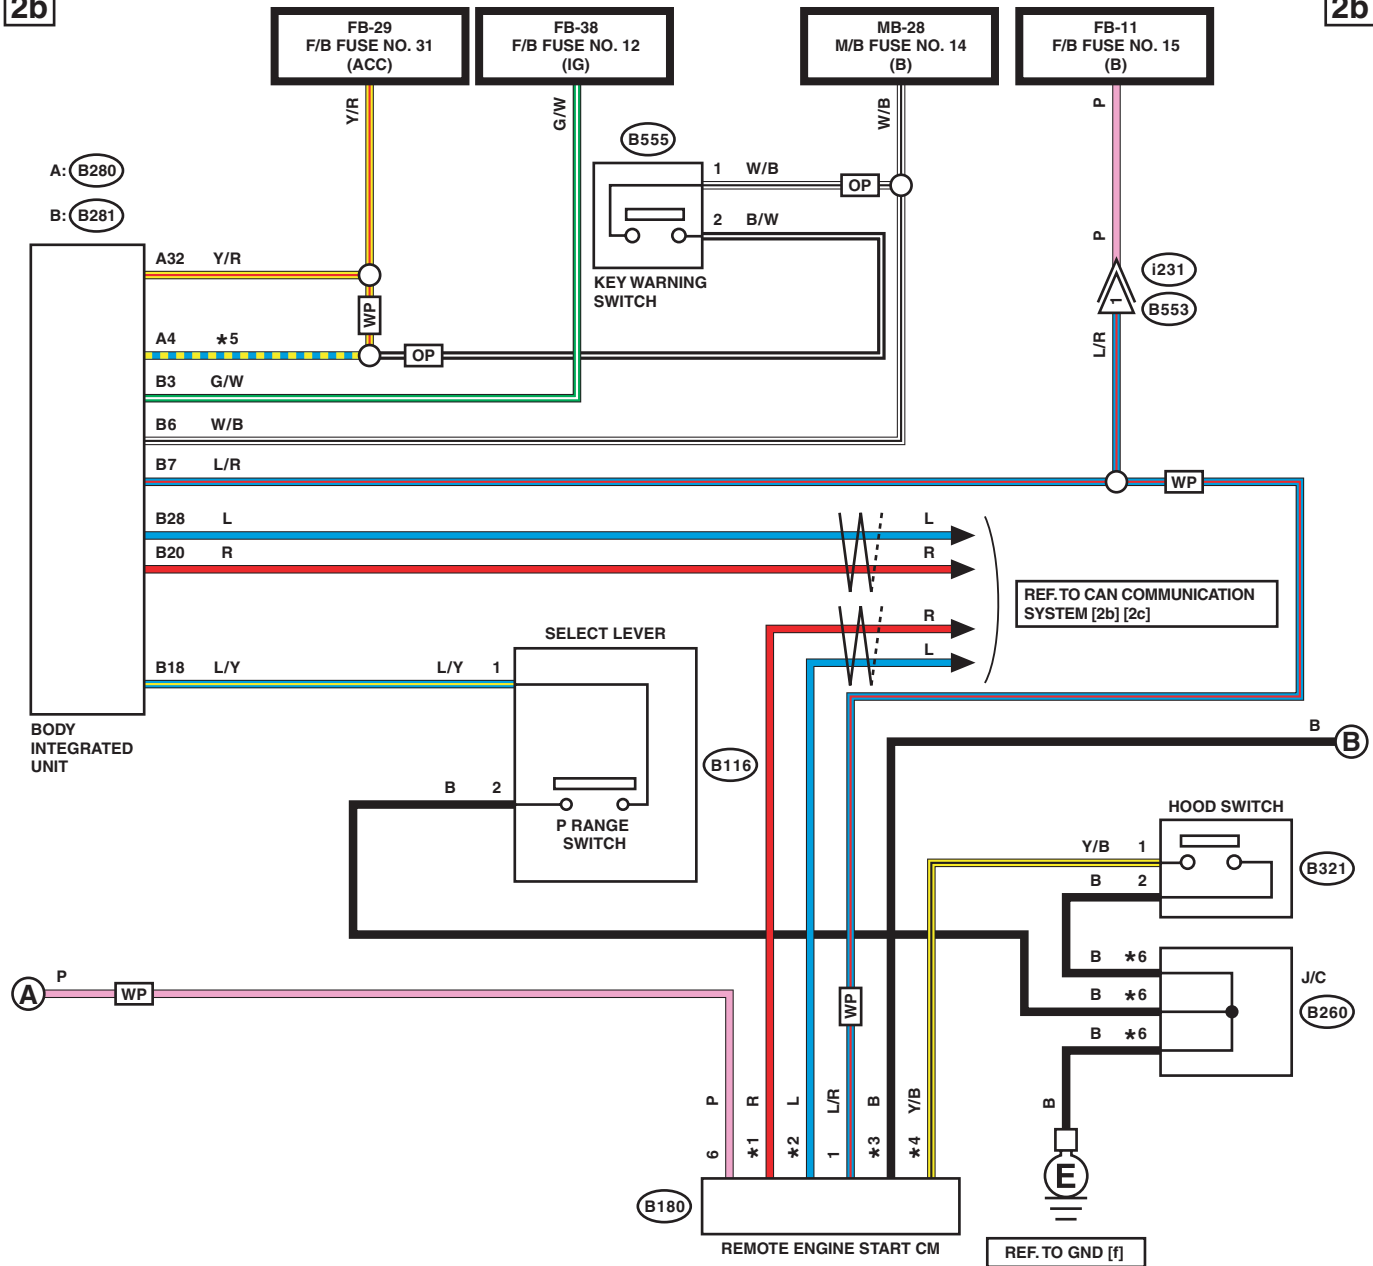


WI-40935

Remote Engine Start System

WIRING SYSTEM

2c

2c

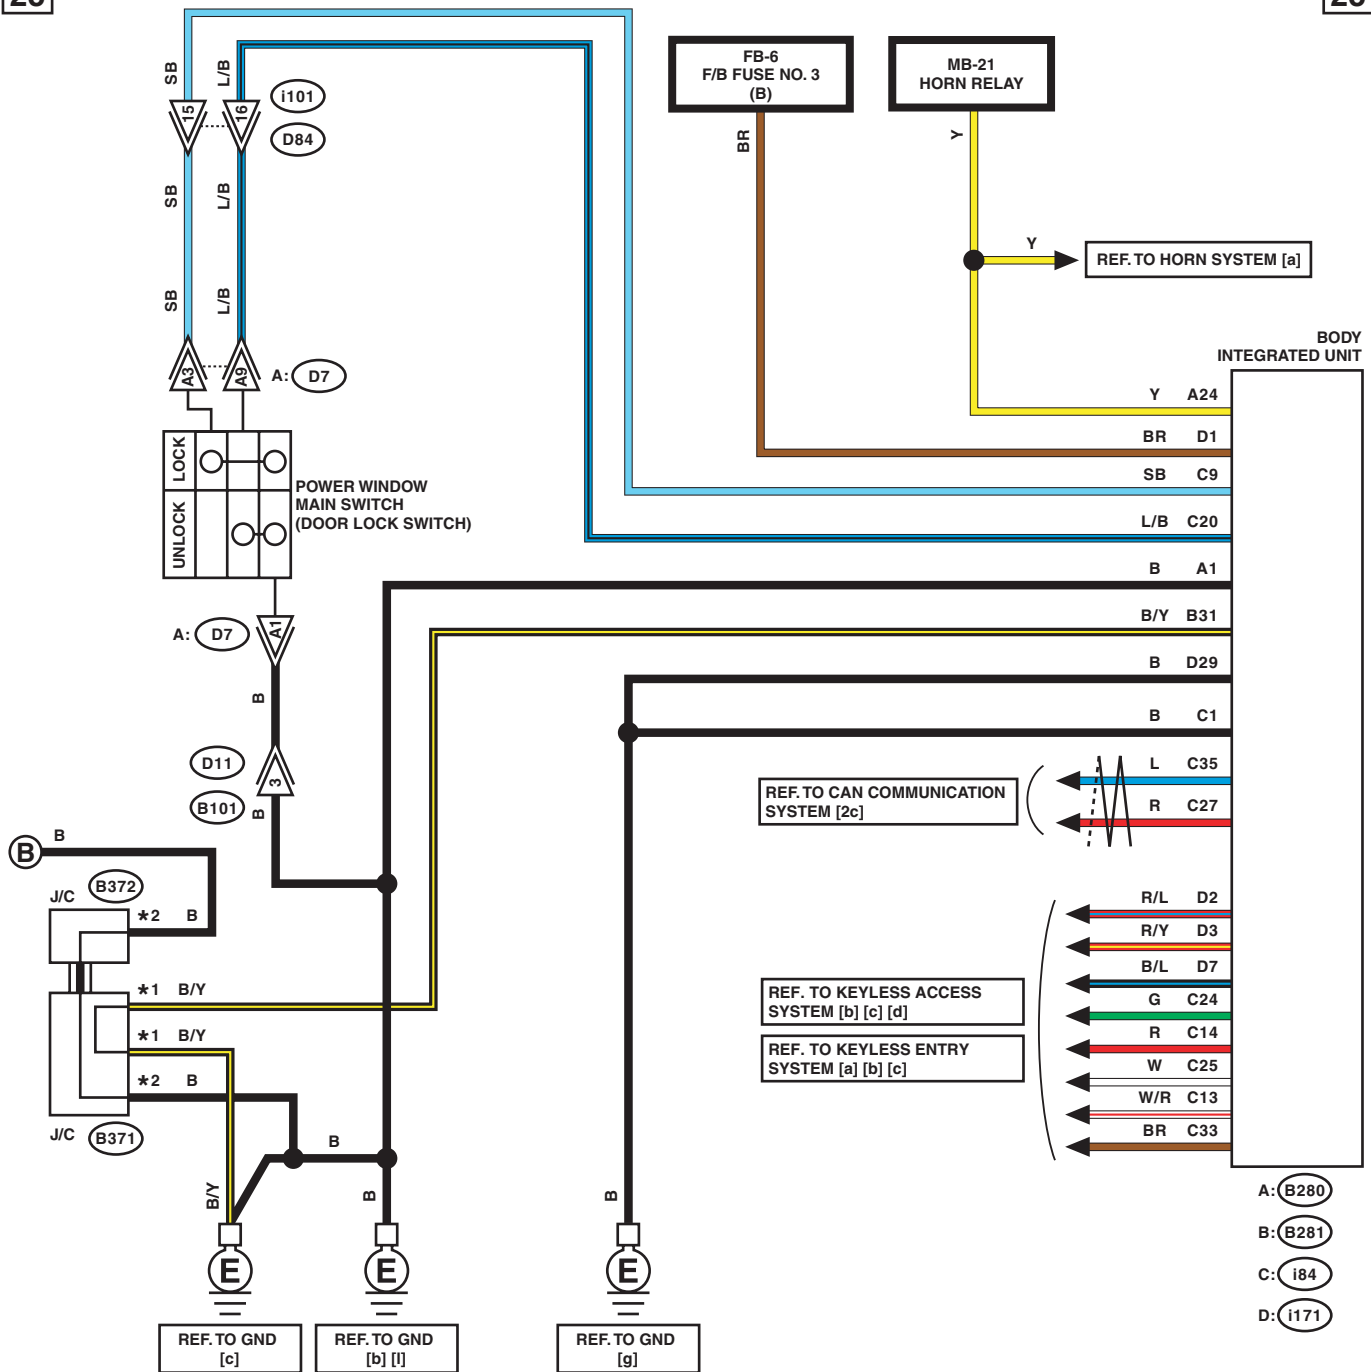

*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
*2 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8, 9, 10, 11 AND 12

WI-40936

 




 
 



 

 


Remote Engine Start System

WIRING SYSTEM

2d

2d

LIST OF CONNECTORS

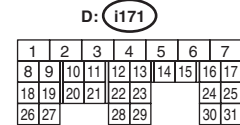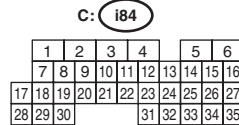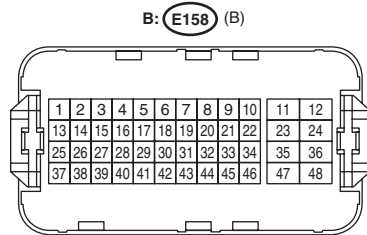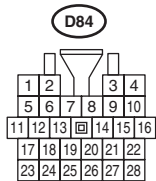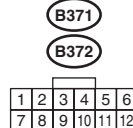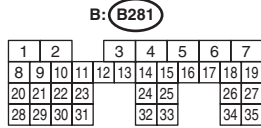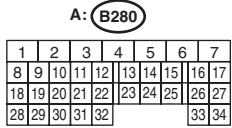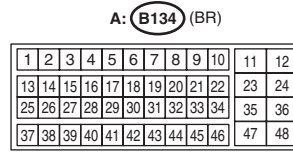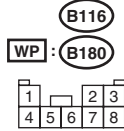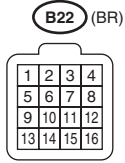

OP : WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START