

Bulkhead Wiring Harness (In Engine Compartment) RH

WIRING SYSTEM

64. Bulkhead Wiring Harness (In Engine Compartment) RH

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	B	B-2		Mass air flow and intake air temperature sensor (non-turbo model)
	5	B	B-1		Mass air flow and intake air temperature sensor (turbo model)
B6	2	GR	B-3		Front ABS wheel speed sensor RH
B21	54	B	B-4	E2	Engine wiring harness (non-turbo model)
B22	16	BR	B-4	E3	
B24	2	GR	B-4	T1	Back-up light switch (MT model)
B25	2	BR	B-4	T2	Neutral position switch 1 (MT model)
B122	8	GR	C-2		J/C (turbo model)
B134	48	BR	C-2		ECM (turbo model)
B210	13	★	B-2		Relay holder (turbo model)
B310	38	★	B-2		VDC CM
B321	2	B	B-2		Hood switch
B430	2	B	A-3		Puddle light RH
B450	10	B	B-3		Power steering CM
B451	6	GR	B-3		Torque sensor
B452	2	B	B-3		Power steering CM

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB16	2	Y	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment) RH

WIRING SYSTEM

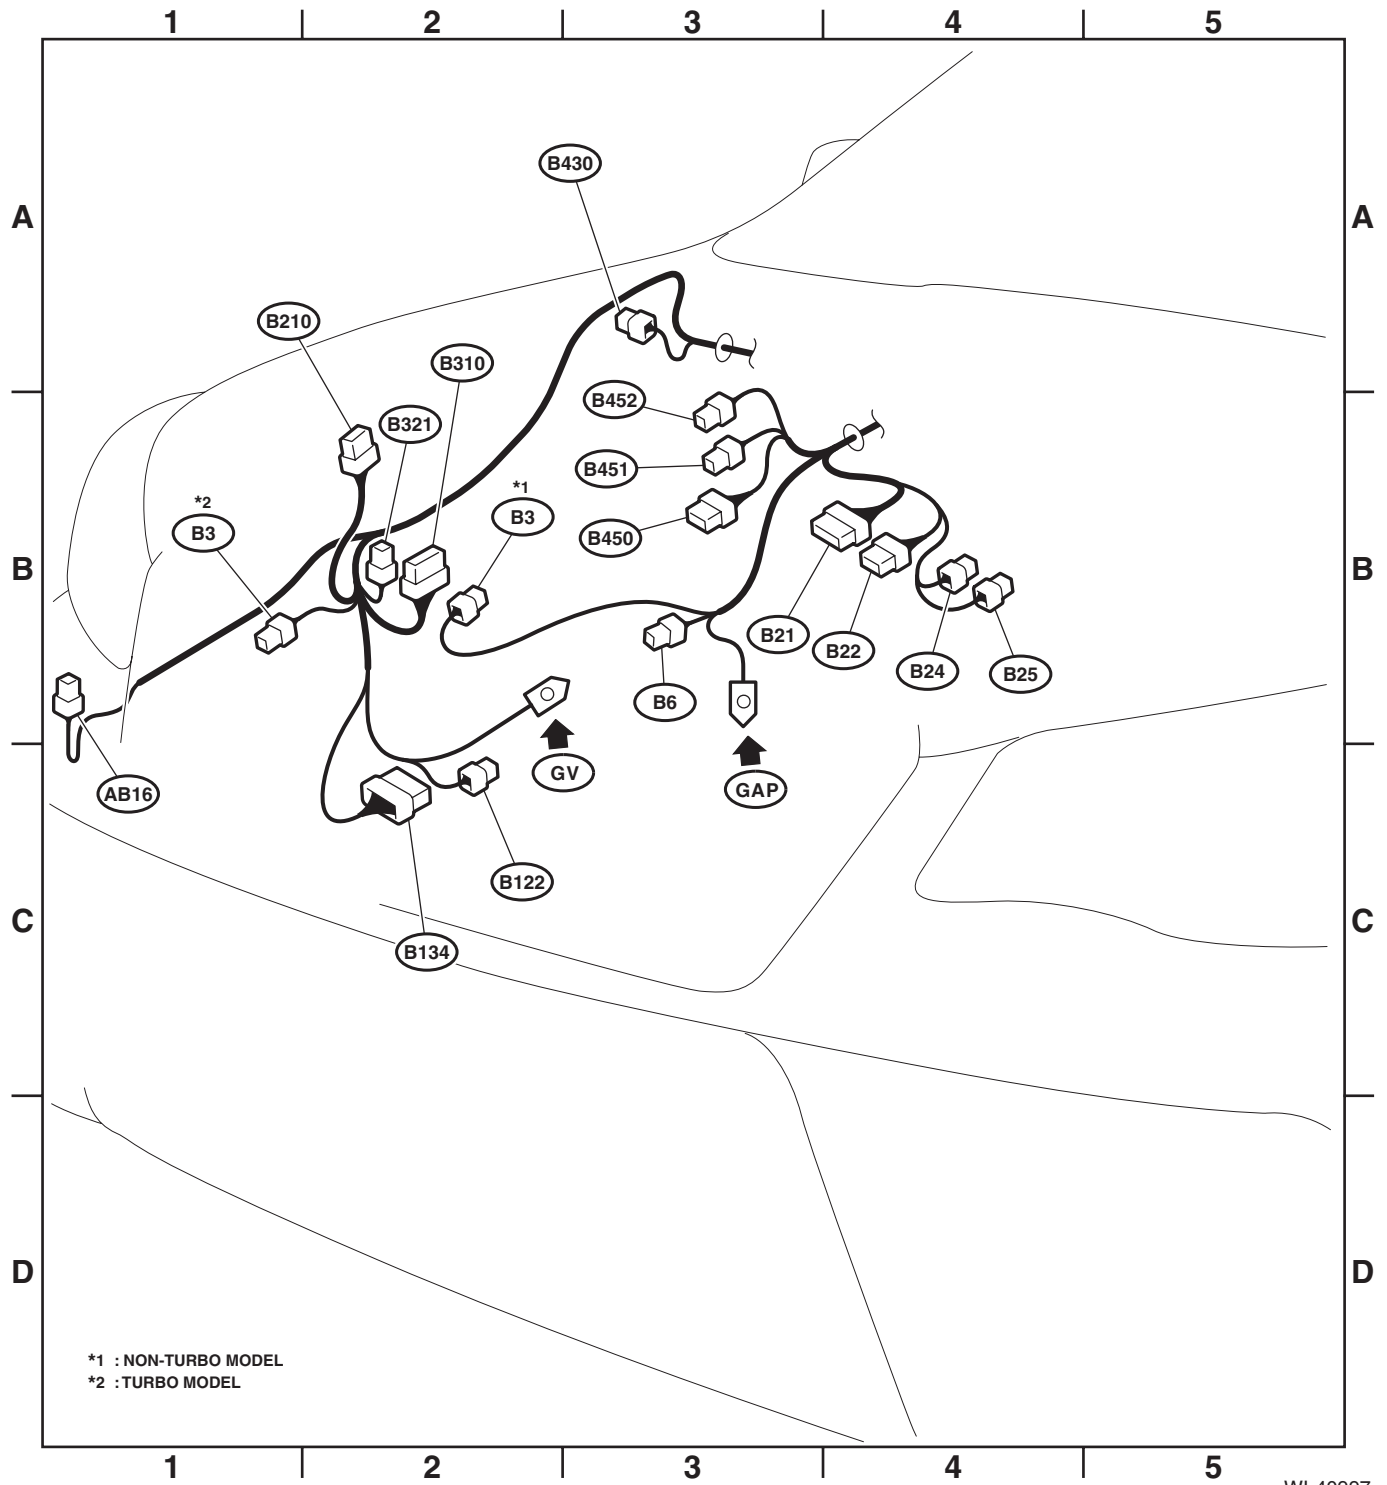

WI-40997