

# Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM

## 65. Bulkhead Wiring Harness (In Engine Compartment) LH

### A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B8	5	GR	A-4		Front wiper motor
B10	4	GR	B-2		Pressure switch
B11	12	GR	A-2	T4	Transmission cord (non-turbo CVT model)
	20	GR	A-2	T4	Transmission cord (turbo CVT model)
B12	16	BR	A-2	T3	Transmission cord (non-turbo CVT model)
	12	GR	A-2	T3	Transmission cord (turbo CVT model)
B14	1	B	B-2		Starter motor
B15	2	GR	B-3		Front ABS wheel speed sensor LH
B16	2	GR	A-3		Brake fluid level switch
B22	16	BR	A-1	E3	Engine wiring harness (turbo model)
B143	20	★	B-3		M/B
B144	9	BR	B-3		
B145	7	BR	B-3		
B146	2	GR	D-3		Front washer motor
B147	2	GR	D-3		Rear washer motor
B164	2	B	D-2		Keyless buzzer
B177	2	GR	A-2		Wiper deicer
B186	8	★	B-3		M/B
B191	2	GR	D-2		Headlight washer motor
B192	6	GR	D-2		Headlight washer unit
B360	16	GR	C-3	F109	Through joint connector
B361	14	GR	C-3	F108	
B396	2	BR	D-2		Washer fluid level sensor
B407	2	B	B-5		Puddle light LH
B472	4	GR	B-2		Battery current & temperature sensor
B564	17	★	B-3		Fuse holder
B565	3	B	B-4		Brake booster pressure sensor (turbo model)
B571	2	★	B-3		M/B

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Y	D-1		Front sub sensor LH

# Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM

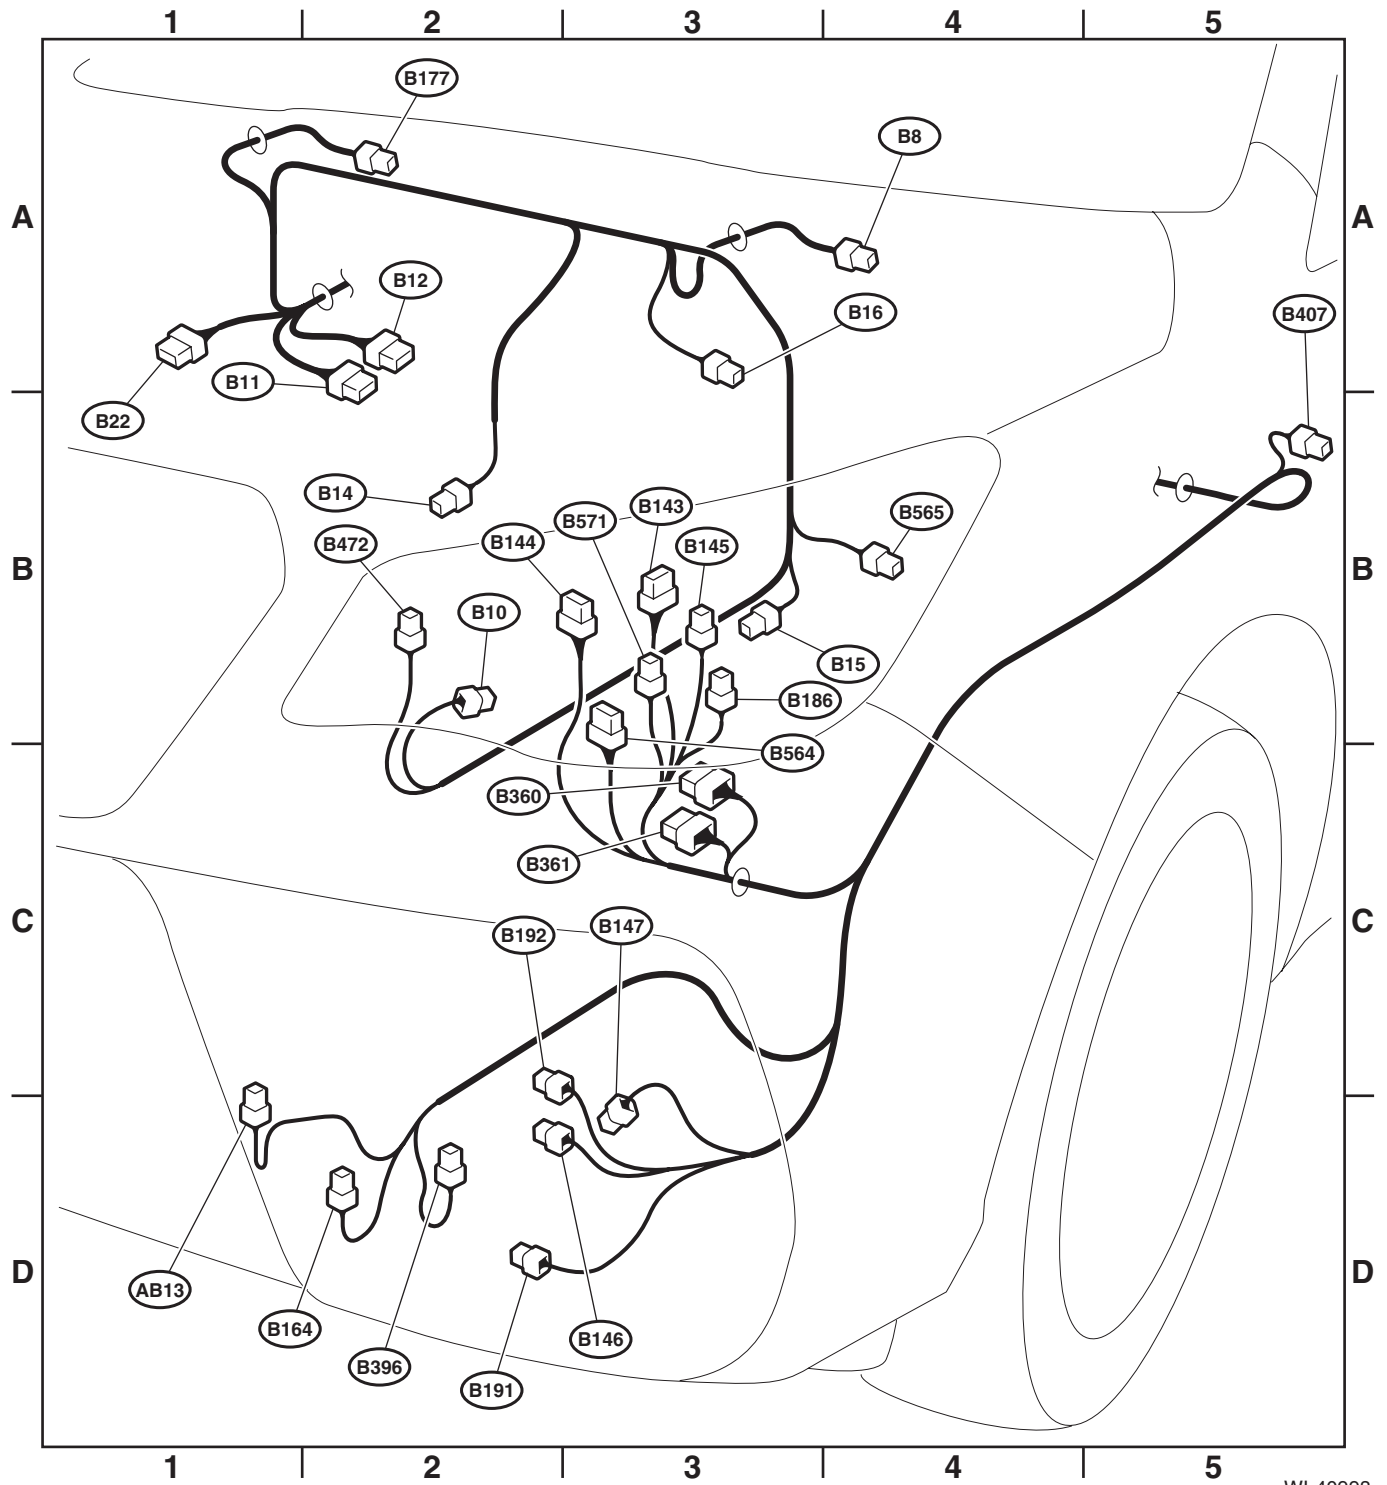

WI-40998