

Bulkhead Wiring Harness (In Compartment) RH

WIRING SYSTEM

66. Bulkhead Wiring Harness (In Compartment) RH

A: LOCATION

1. NON-TURBO MODEL


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B27	4	★	B-2		Resistor
B30	11	★	C-5	D1	Front door cord RH
B57	4	★	C-2		Power transistor
B87	2	★	C-4		Blower motor
B88	2	BR	C-2		Evaporator sensor (auto A/C)
	3	★	C-2		Evaporator sensor (manual A/C)
B90	18	★	B-5	R50	Roof cord
B97	14	★	D-5	R1	Rear wiring harness
B98	18	★	D-5	R2	
B116	8	★	D-1		Select lever
B120	12	★	C-3		J/C
B121	12	★	C-3		
B134	34	★	B-2		ECM
B135	35	★	B-3		
B136	35	★	B-3		
B137	31	★	B-3		
B151	6	★	B-5	R480	Roof cord (with EyeSight)
B163	6	B	C-4		Intake door actuator
B185	6	★	C-1		X mode switch
B220	44	★	B-3		Relay holder
B230	4	★	D-1		Yaw rate & G sensor (with EyeSight)
B239	6	★	C-2		Air mix door actuator RH
B240	4	★	B-5		J/C
B241	4	★	B-5		
B246	4	★	C-3		
B247	4	★	C-3		
B258	4	★	B-2		
B259	4	★	B-2		
B260	12	★	C-3		
B358	2	★	D-1		Select lever illumination
B386	4	★	C-5		Blower motor relay
B579	3	★	C-1		Keyless access interior antenna (front)
B583	18	★	C-3	i237	Instrument panel wiring harness
B584	20	★	C-3	i238	

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB6	30	Y	C-1		Airbag CM
AB9	4	Y	C-2		Passenger's airbag module

Bulkhead Wiring Harness (In Compartment) RH

WIRING SYSTEM

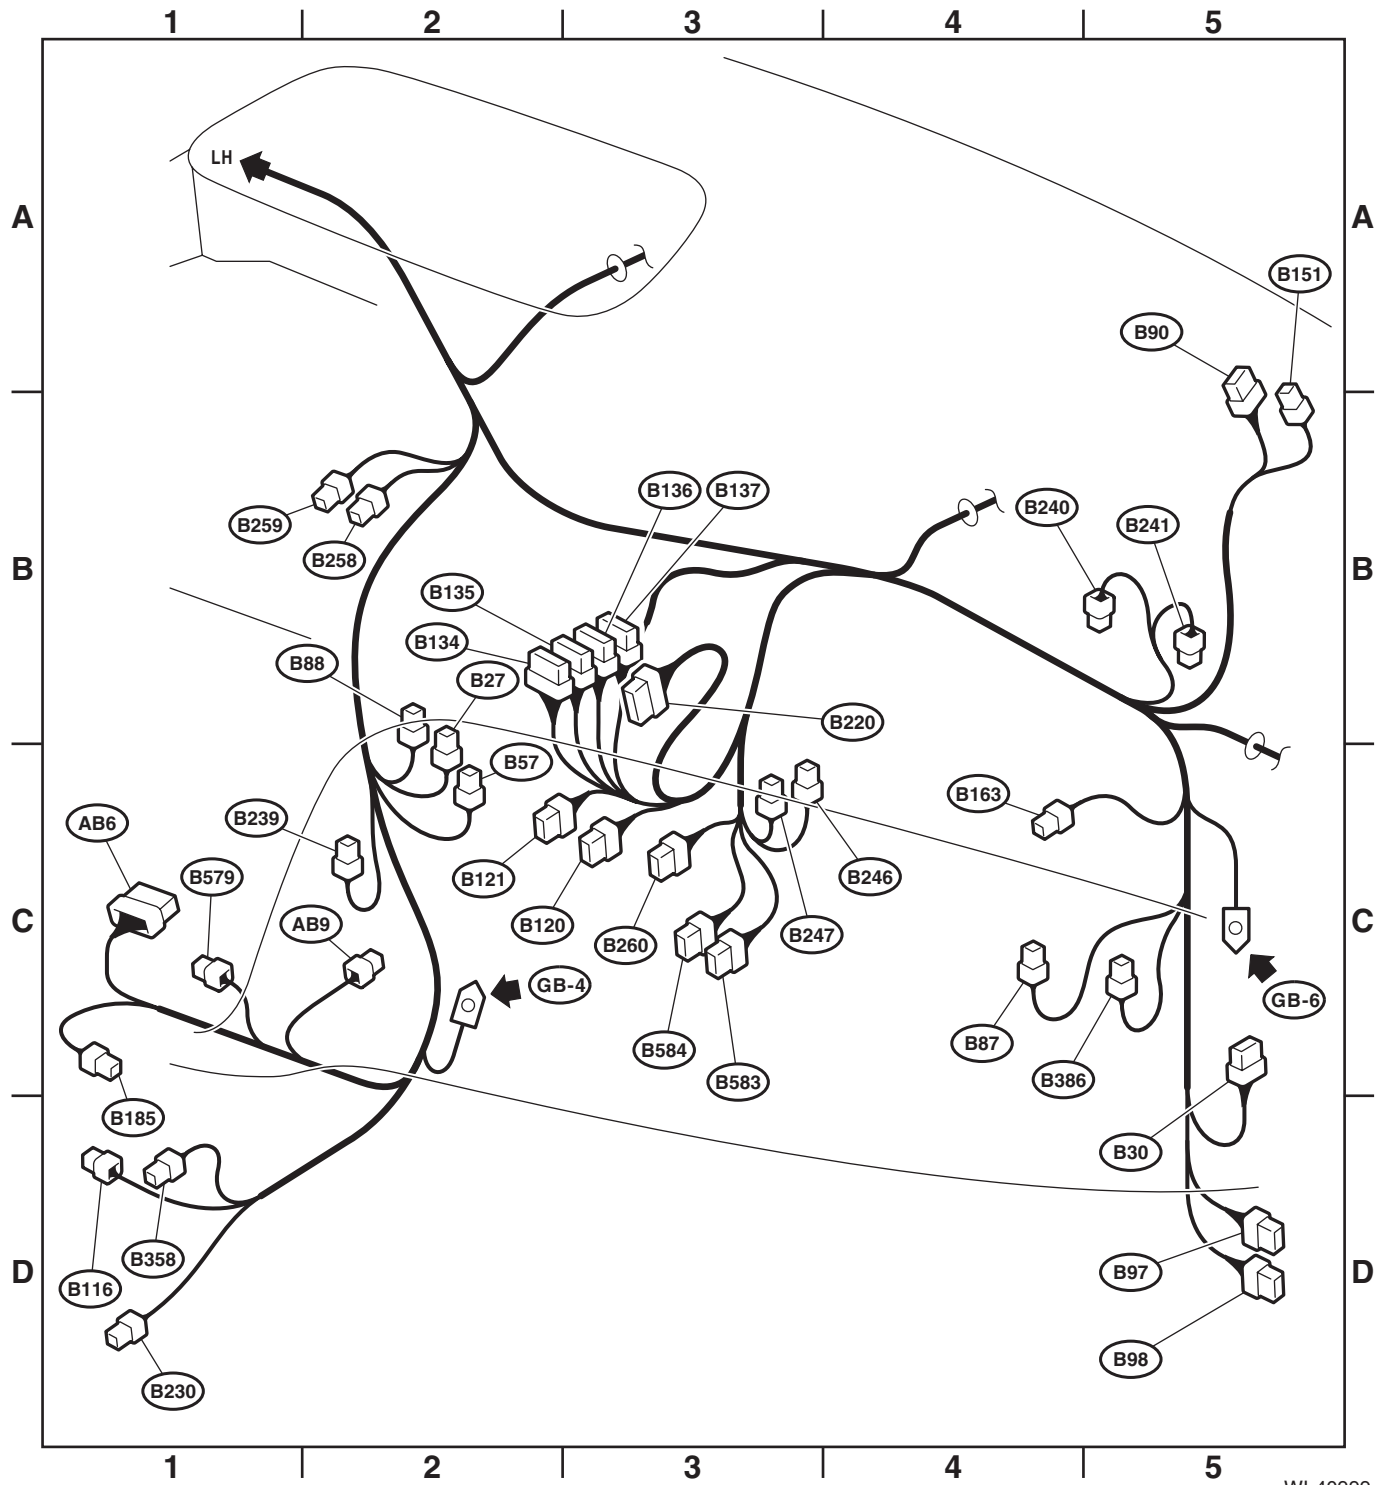

WI-40999

Bulkhead Wiring Harness (In Compartment) RH

WIRING SYSTEM

2. TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B27	4	★	C-2		Resistor
B30	11	★	C-5	D1	Front door cord RH
B57	4	★	C-2		Power transistor
B87	2	★	C-4		Blower motor
B88	2	BR	B-2		Evaporator sensor (auto A/C)
	3	★	B-2		Evaporator sensor (manual A/C)
B90	18	★	A-5	R50	Roof cord
B97	14	★	D-5	R1	Rear wiring harness
B98	18	★	D-5	R2	
B116	8	★	D-1		Select lever
B151	6	★	B-5	R480	Roof cord (with EyeSight)
B163	6	B	C-4		Intake door actuator
B185	6	★	C-1		X mode switch
B220	44	★	B-3		Relay holder
B230	4	★	D-1		Yaw rate & G sensor (with EyeSight)
B239	6	★	C-2		Air mix door actuator RH
B240	4	★	B-5	J/C	
B241	4	★	B-5		
B246	4	★	C-3		
B247	4	★	C-3		
B258	4	★	B-2		
B259	4	★	B-2		
B260	12	★	C-3		
B358	2	★	D-1		
B386	4	★	C-5		Blower motor relay
B579	3	★	C-1		Keyless access interior antenna (front)
B583	18	★	C-3	i237	Instrument panel wiring harness
B584	20	★	C-3	i238	

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB6	30	Y	C-1		Airbag CM
AB9	4	Y	C-2		Passenger's airbag module

