

## 72.Rear Wiring Harness RH

## A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	14	★	B-2	B97	Bulkhead wiring harness
R2	18	★	B-2	B98	
R12	3	★	B-4		Front door switch RH
R13	8	★	B-4	D28	Rear door cord RH (without audio amplifier)
	10	★	B-4	D28	Rear door cord RH (with audio amplifier)
R44	4	★	B-4		Seat heater RH
R45	6	BR	C-4		Seat heater switch RH
R82	18	★	C-4	R81	Rear wiring harness LH
R98	16	★	B-3	i53	Instrument panel wiring harness
R124	2	★	B-3	AB63	Airbag wiring harness
R284	6	★	C-4		AUX input terminal
R311	2	★	C-4		Rear accessory power supply socket (console)
R382	22	★	B-3	i95	Instrument panel wiring harness

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB18	24	Y	C-3		Airbag CM
AB24	4	Y	B-4		Side airbag module RH
AB26	2	B	B-4		Pretensioner RH
AB28	4	Y	B-4		Side airbag sensor RH
AB30	2	Y	B-4		Lap seat belt pretensioner RH
AB53	3	GR	B-4		Occupant detection control module

# Rear Wiring Harness RH

WIRING SYSTEM

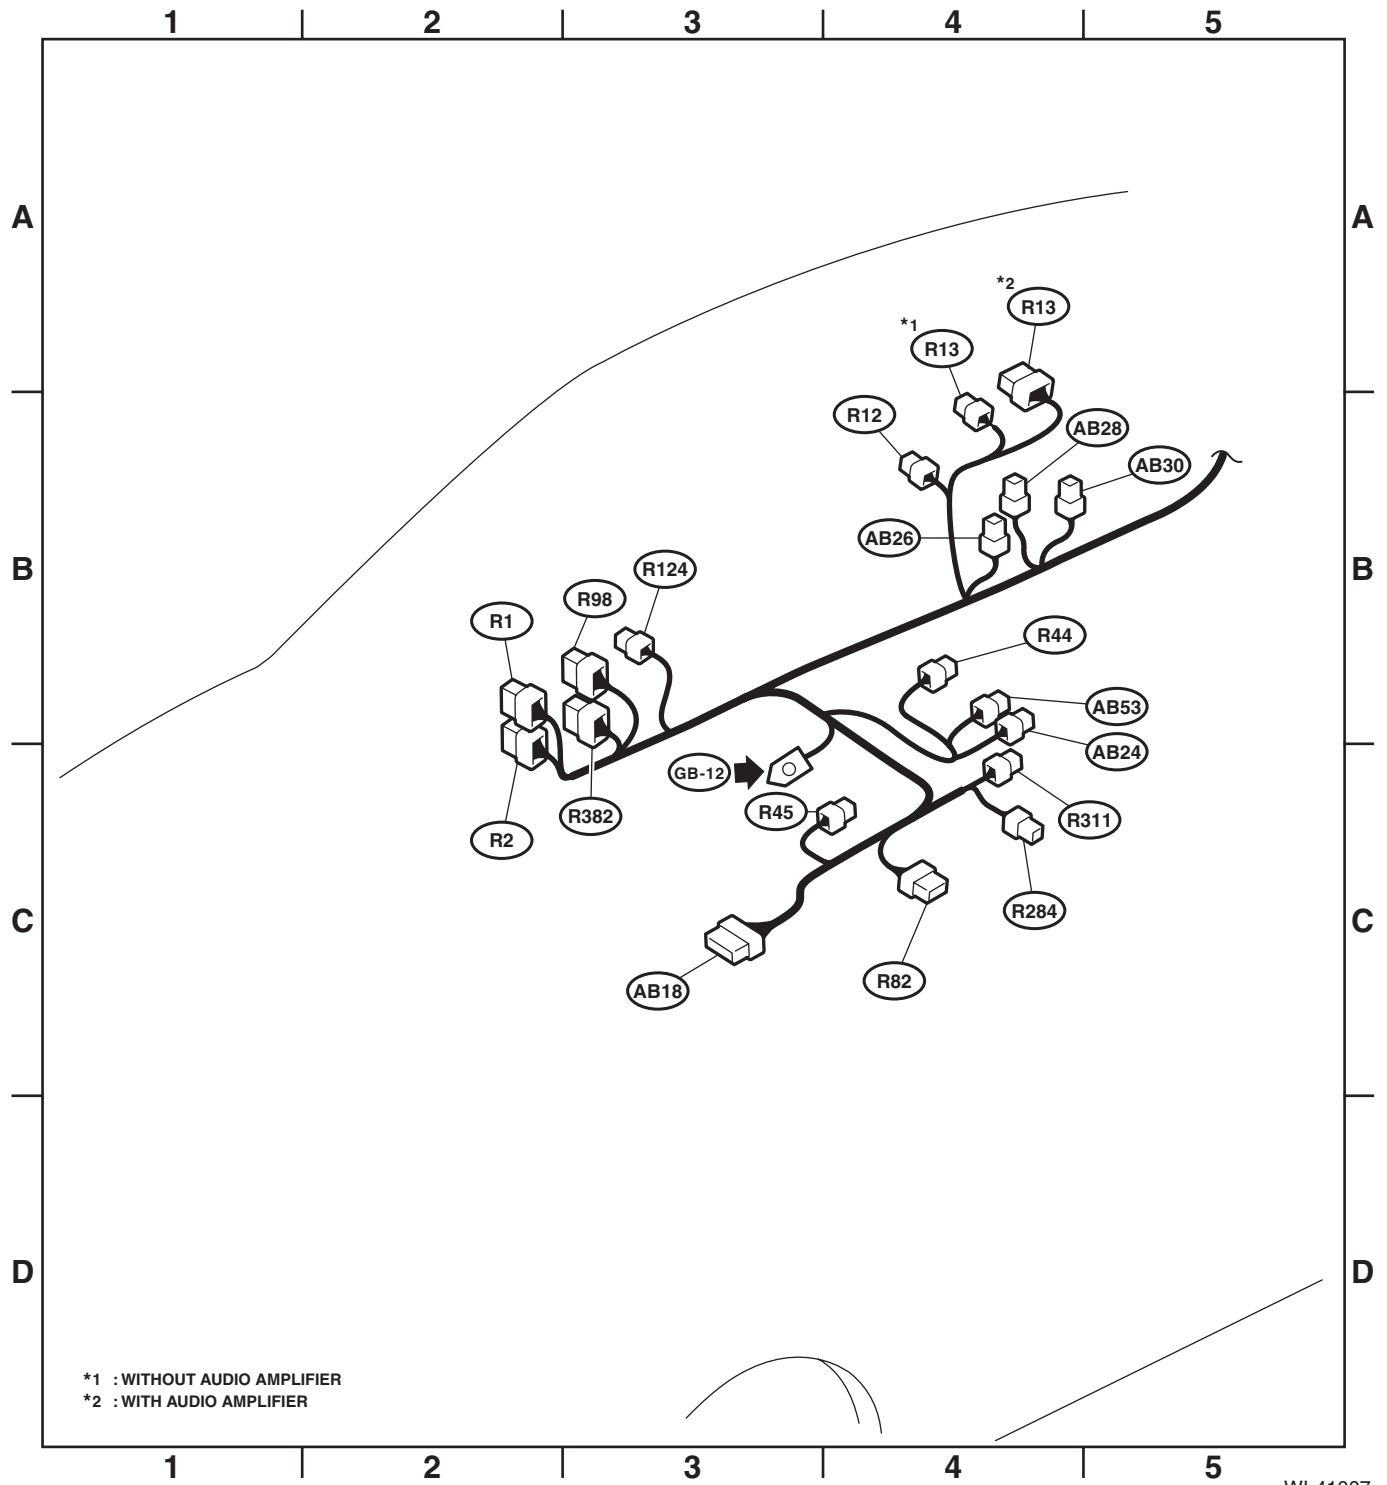

WI-41007