

BLOWER MOTOR ASSEMBLY

HVAC System (Heater, Ventilator and A/C)


7. Blower Motor Assembly S701295

B: INSTALLATION S701295A11


A: REMOVAL S701295A18

Install in the reverse order of removal.

- 1) Disconnect GND cable from battery.
- 2) Remove glove box.

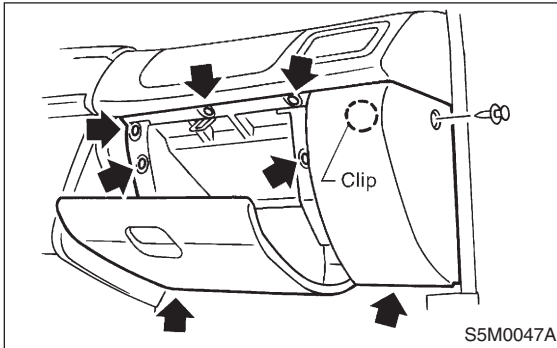

- 3) Disconnect blower motor harness connector.
- 4) Disconnect aspirator pipe (A).
- 5) Remove blower motor mounting screw.

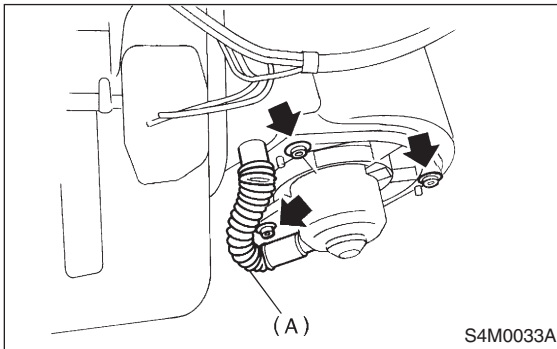

- 6) Remove blower motor assembly.