

6. Heater Unit S701290


A: REMOVAL S701290A18

- 1) Disconnect GND cable from battery.
- 2) Remove heater hoses (inlet, outlet) in engine compartment.

NOTE:

Drain as much coolant from heater unit as possible, and plug disconnected hose with cloth.
<Ref. to CO-6 REPLACEMENT, Engine Coolant.>

- 3) Remove instrument panel.
<Ref. to EI-25 REMOVAL, Instrument Panel Assembly.>
- 4) Remove steering support beam.
- 5) Remove cooling unit.
<Ref. to AC-33 REMOVAL, Intake Unit with Evaporator.>
- 6) Remove heater unit.

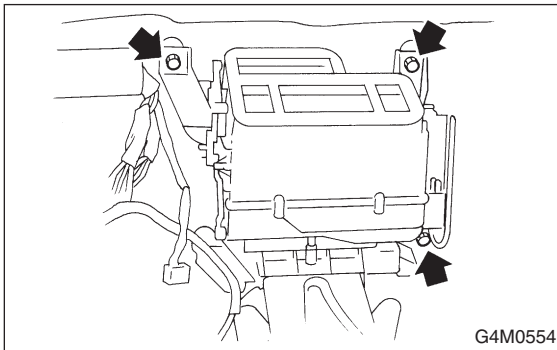

B: INSTALLATION S701290A11

- 1) Install in the reverse order of removal.

Fitted length of heater hose over pipe:
27.5±2.5 mm (1.083±0.098 in)

- 2) Pour coolant.
<Ref. to CO-6 REPLACEMENT, Engine Coolant.>