

RECEIVER DRIER

HVAC System (Heater, Ventilator and A/C)


11. Receiver Drier S701283

A: REMOVAL S701283A18

- 1) Disconnect battery negative terminal.
- 2) Discharge refrigerant using refrigerant recovery system. <Ref. to AC-16 OPERATION, Refrigerant Recovery Procedure.>
- 3) Disconnect pressure switch connector (A).
- 4) Disconnect pipes (B).
- 5) Remove mounting bolt (C) and remove receiver drier.

CAUTION:

The receiver drier contains a desiccant. Be sure to put a blind plug in the detached receiver drier to protect it from moisture.

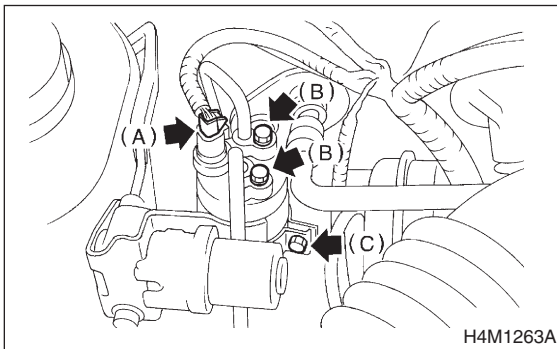

B: INSTALLATION S701283A11

- 1) Install in the reverse order of removal.
- 2) Charge refrigerant. <Ref. to AC-17 OPERATION, Refrigerant Charging Procedure.>