

REFRIGERANT RECOVERY PROCEDURE

HVAC System (Heater, Ventilator and A/C)

2. Refrigerant Recovery Procedure S701291

6) Follow the operation manual to activate the refrigerant recovery system.

A: OPERATION S701291A16

CAUTION:


- During operation, be sure to wear safety goggles and protective gloves.
- Connect the refrigerant recovery system with the manifold gauge set to discharge the refrigerant from the A/C system and reuse it.
- When reusing the discharged refrigerant, keep service cans on hand. Because the discharge rate with the recovery system is approx. 90%, service cans are necessary to charge the refrigerant.
- Follow the detailed operation procedure described in the operation manual attached to the refrigerant recovery system.

1) Turn the A/C switch ON.


Leave the engine running for approx. 5 minutes to activate the compressor. Perform the refrigerating cycle with the refrigerant to discharge the compressor oil remaining on the functional parts into the compressor as much as possible.

2) Stop the engine.

3) Close the valves on the low-/high-pressure sides of the manifold gauge set.

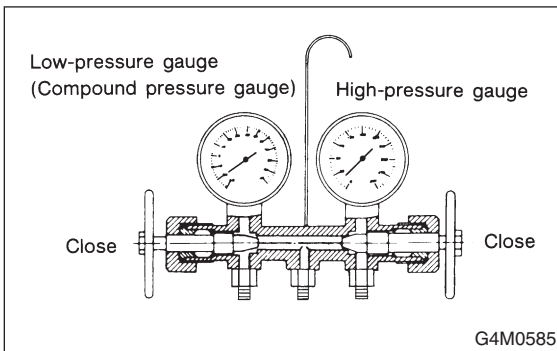

4) Install the low-/high-pressure hoses to the service ports on the low-/high-pressure sides of the vehicle respectively.

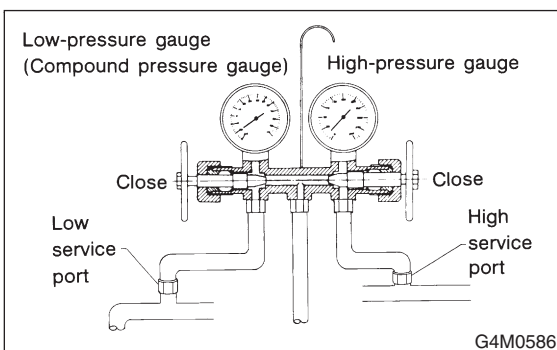

5) Connect the center hose to the refrigerant recovery system.