

RELAY AND FUSE


HVAC System (Heater, Ventilator and A/C)

14. Relay and Fuse S701287

A: LOCATION S701287A13

Relays used with A/C system are located as shown in figure.

- A/C relay
- Sub fan (condenser fan) relay
- Fuses (15 A and 20 A)

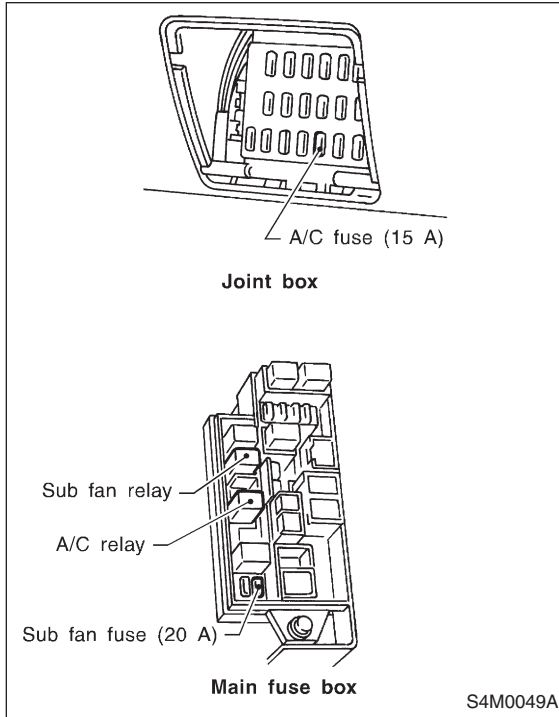

B: INSPECTION S701287A10

Check conduction with a circuit tester (ohm range) according to the following table in figure.

