

43. Engine Wiring Harness and Transmission Cord S903447

A: LOCATION S903447A13

1. 2200 cc ENGINE MODEL S903447A1304

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E1	10	★	C-1/C-3	B20	Bulkhead wiring harness
E2	20	★	A-2	B21	Bulkhead wiring harness
E3	16	★	A-2	B22	Bulkhead wiring harness
E4	2	Blue	A-2		Purge control solenoid valve
E5	2	Gray	A-1		Injector #1
E6	2	Gray	A-2		Injector #3
E7	3	Gray	A-3		Idle air control solenoid valve
E8	3	★	B-2		Engine coolant temperature sensor and thermometer
E10	2	★	B-2		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Dark gray	A-2		Ignition coil and ignitor
E13	3	Black	A-2		Throttle position sensor
E14	2	Gray	A-3		Knock sensor
E15	2	★	B-3		Camshaft position sensor
E16	2	Gray	B-3		Injector #2
E17	2	Gray	B-4		Injector #4
E19	2	★	B-2		Power steering oil pressure switch
E20	2	Black	A-3		Intake air temperature sensor
E21	3	★	A-3		Intake manifold pressure sensor
E24	4	★	D-1/D-3		Front oxygen (A/F) sensor
E25	4	★	D-2/C-4		Rear oxygen sensor


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-1	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-1	B25	
T3	12	★	D-3	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-3	B11	
T7	12	★	C-4		Inhibitor switch (AT)

★: Non-colored

ENGINE WIRING HARNESS AND TRANSMISSION CORD

Wiring System

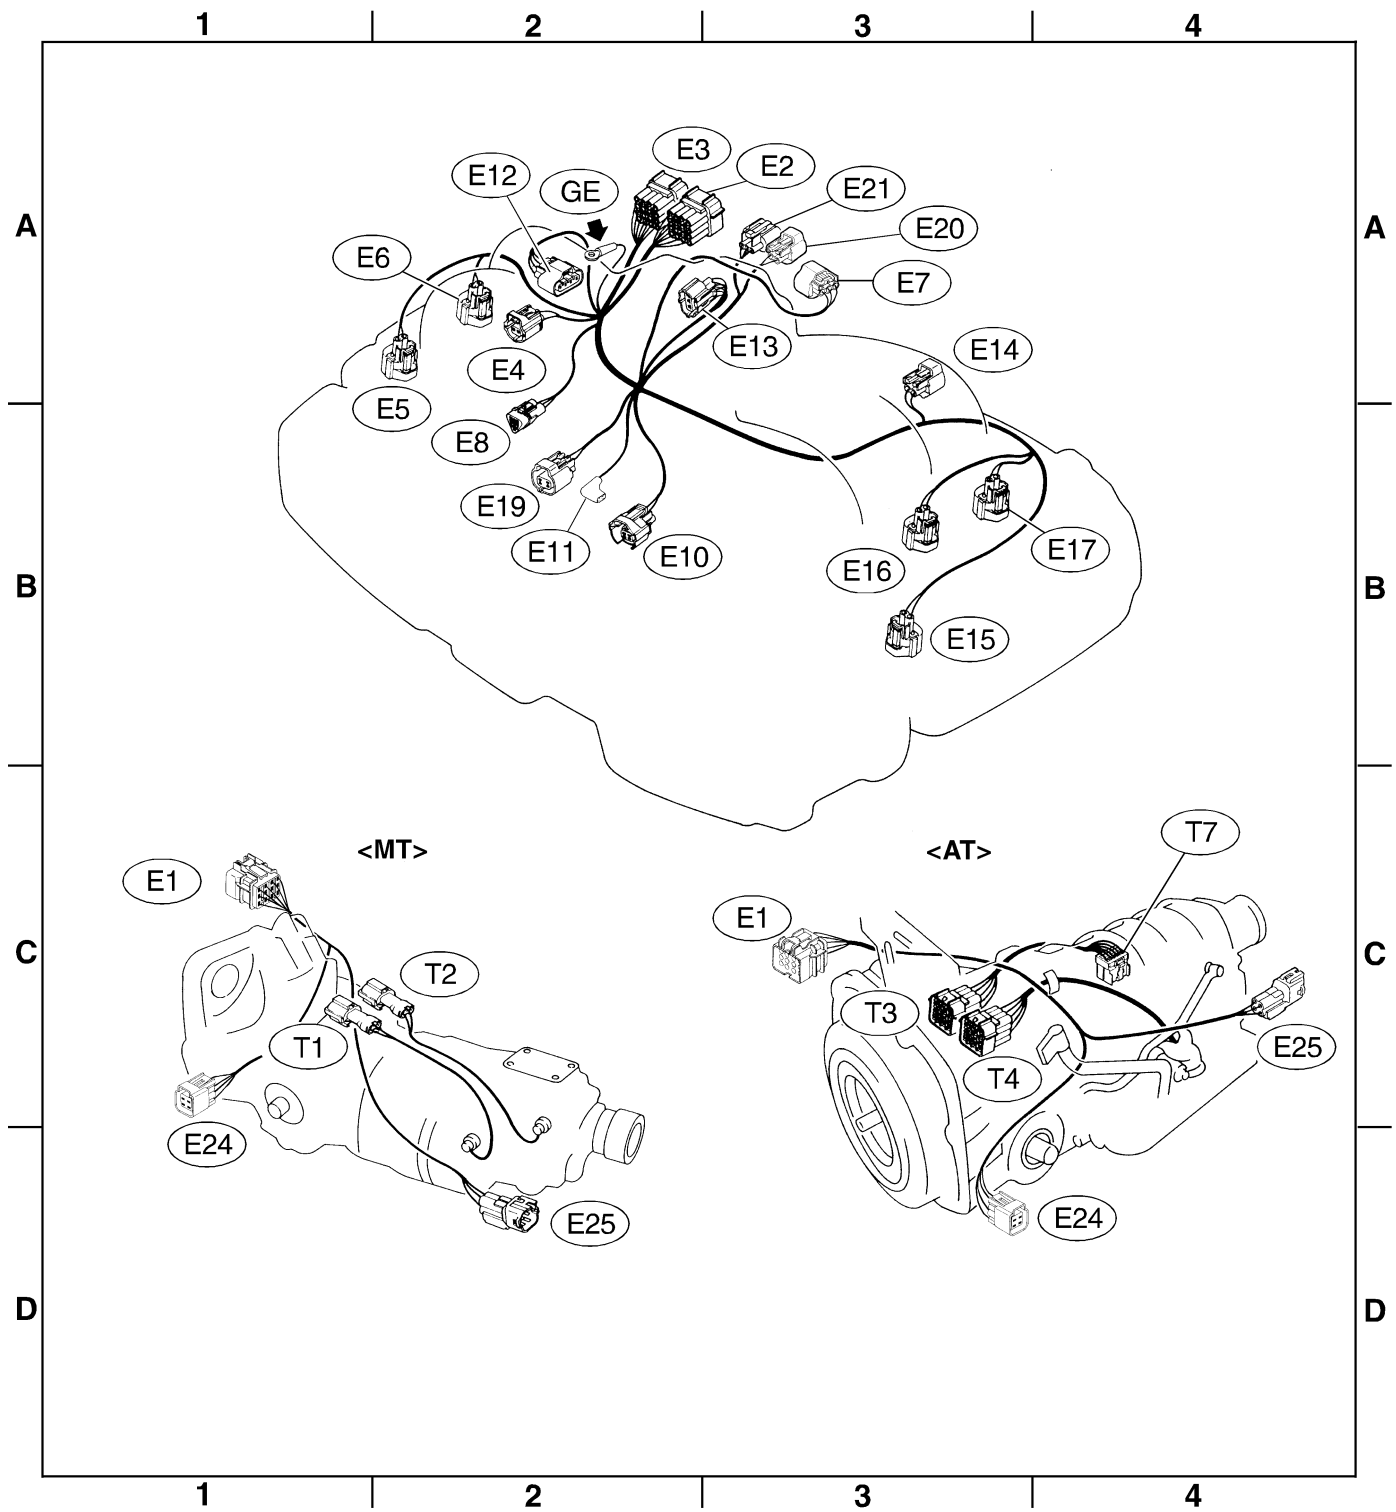

H6M0785A

ENGINE WIRING HARNESS AND TRANSMISSION CORD

Wiring System

2. 2500 cc ENGINE MODEL S903447A1305

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E1	10	★	C-1/C-3	B20	Bulkhead wiring harness
E2	20	★	A-2	B21	Bulkhead wiring harness
E3	16	★	A-2	B22	Bulkhead wiring harness
E4	2	Blue	A-2		Purge control solenoid valve
E5	2	Gray	A-1		Injector #1
E6	2	Gray	A-2		Injector #3
E7	6	★	A-3		Idle air control solenoid valve
E8	3	★	B-2		Engine coolant temperature sensor and thermometer
E10	2	★	B-2		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Dark gray	A-2		Ignition coil and ignitor
E13	4	★	A-2		Throttle position sensor
E14	2	Gray	A-3		Knock sensor
E15	2	★	B-3		Camshaft position sensor
E16	2	Gray	B-3		Injector #2
E17	2	Gray	B-4		Injector #4
E19	2	★	B-2		Power steering oil pressure switch
E21	4	★	A-3		Pressure sensor and intake air temperature sensor
E24	6	★	D-1/D-3		Front oxygen (A/F) sensor
E25	4	★	D-2/C-4		Rear oxygen sensor
E42	2	★	A-3		Air assist solenoid valve


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-1	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-1	B25	
T3	12	★	D-3	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-3	B11	
T7	12	★	C-4		Inhibitor switch (AT)

★: Non-colored

ENGINE WIRING HARNESS AND TRANSMISSION CORD

Wiring System

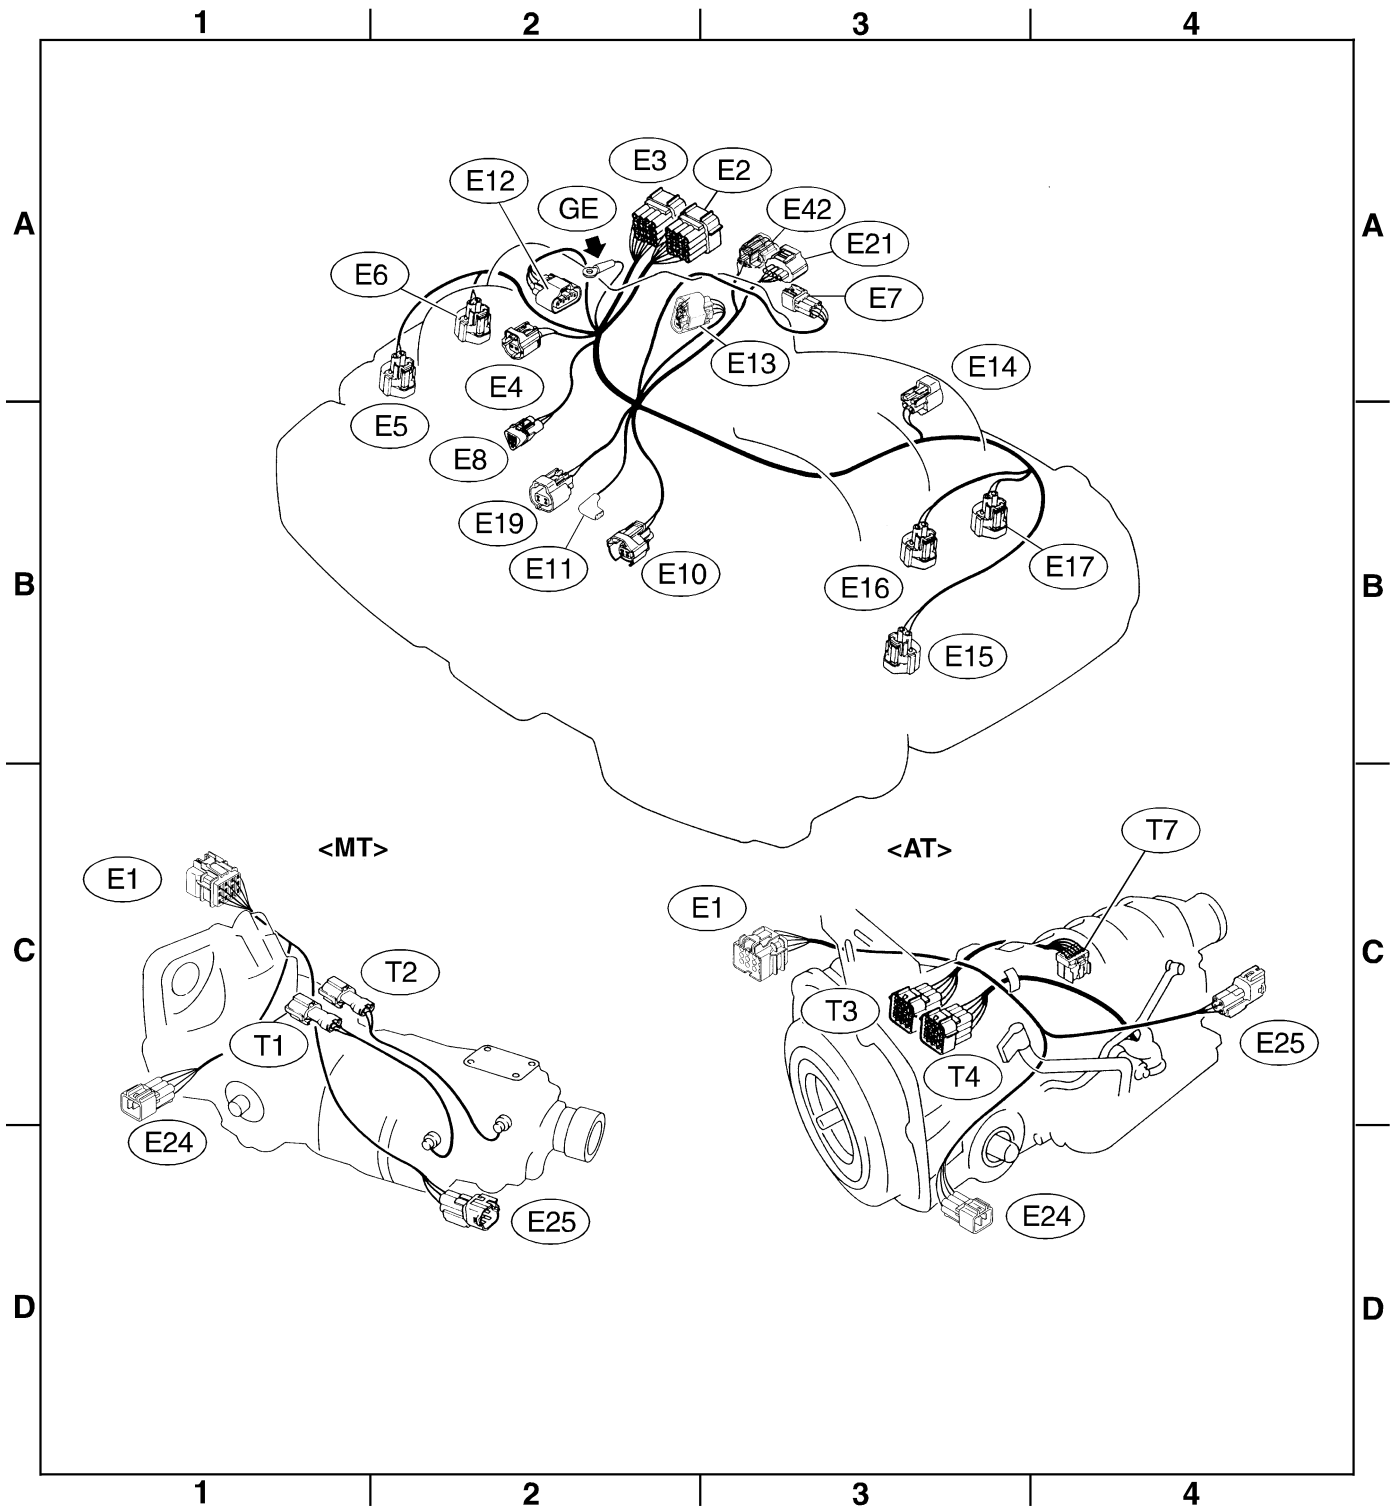

H6M0786A