

REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

51. Rear Wiring Harness, Bulkhead wiring Harness, Roof Cord and Fuel Tank Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★	B-2	B97	Bulkhead wiring harness
R2	12	★	B-1	B98	
R3	24	★	B-2	B99	
R4	1	★	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch
R15	16	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R72	2	★	B-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★	B-2	R1	Rear wiring harness
B98	12	★	B-1	R2	
B99	24	★	B-2	R3	
B265	4	★	B-2	D27	Rear door cord RH
B266	3	★	B-2	D28	
B267	3	★	C-4		Front door switch LH
B268	3	★	B-2		Front door switch RH
B269	4	★	B-5	D21	Rear door cord LH
B270	3	★	B-4	D22	

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	6	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Not used
R56	2	★	A-3		Spot light
R139	3	★	A-2		Compass mirror

★: Non-colored


REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R47	3	★	B-4		Fuel tank pressure sensor
R57	16	★	B-3	R15	Rear wiring harness
R58	6	★	B-4		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor
R68	2	★	B-4		Pressure control solenoid valve
R69	2	★	A-4		Drain valve
R144	2	★	B-4		Fuel tank sensor control valve
★: Non-colored					

REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

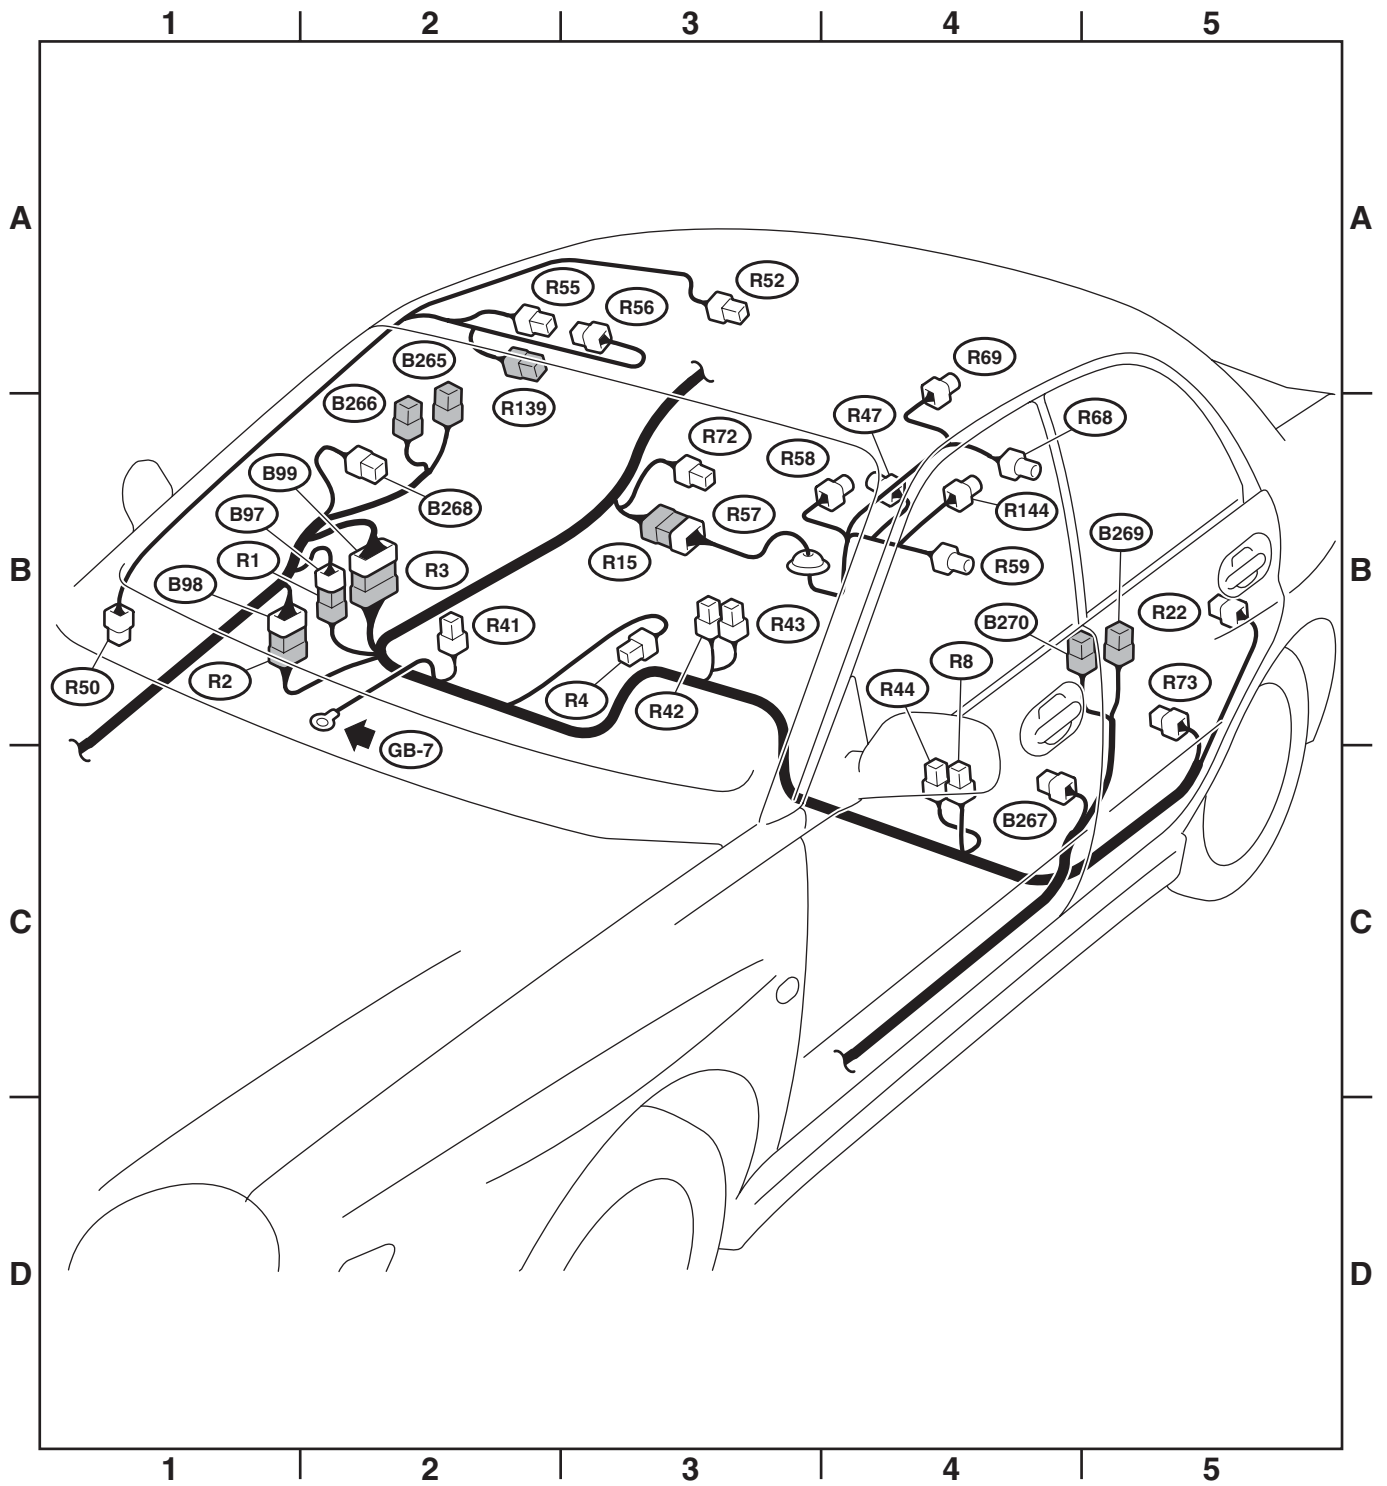

WI-01181