

TRANSFER CASE

General Description ght to you by Eris Studios

1. General Description

A: NOTE

For general description, refer to "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-2, General Description.> 5MT model : <Ref. to 5MT-2, General Description.> 6MT model: <Ref. to 6MT-2, General Description.>

FOR RESALE

2. Transfer Case and Extension Case Assembly

A: NOTE

For removal, installation and inspection, refer to the "5MT" or "6MT" section. 5MT model : <Ref. to 5MT-39, Transfer Case and Extension Case Assembly.> 6MT model: <Ref. to 6MT-43, Extension Case.>

3. Transfer Clutch

A: NOTE

For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-70, Transfer Clutch.>



4. Oil Seal

A: NOTE

Oil Seal^{©rought} to you by Eris Studios NOT FOR RESALE For removal, installation and inspection, refer to the "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-44, Extension Case Oil Seal.> 5MT model : <Ref. to 5MT-33, Oil Seal.> 6MT model: <Ref. to 6MT-28, Oil Seal.>

5. Transfer Drive Gear

A: NOTE

Transfer Drive Geaught to you by Eris Studios For removal, installation and inspection, refer to the "5MT" or "6MT" section. 5MT model : <Ref. to 5MT-43, Transfer Drive Gear.> 6MT model: <Ref. to 6MT-52, Transfer Drive Gear.>

6. Transfer Driven Gear

A: NOTE

Transfer Driven Gearging to you by Eris Studios For removal, installation and inspection, refer to the "5MT" or "6MT" section. 5MT model : <Ref. to 5MT-45, Transfer Driven Gear.> 6MT model: <Ref. to 6MT-54, Transfer Driven Gear.>

7. Reduction Drive Gear

A: NOTE

Reduction Drive Gearght to you by Eris Studios For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-79, Reduction Drive Gear.>



TC-8

8. Reduction Driven Gear

A: NOTE

Reduction Driven Georgint to you by Eris Studios For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-77, Reduction Driven Gear.>

9. Center Differential

A: NOTE

Center Differential gnt to you by Eris Studios For removal, installation and inspection, refer to the "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-81, Center Differential Carrier.> 5MT model : <Ref. to 5MT-47, Center Differential.> 6MT model: <Ref. to 6MT-56, Center Differential.>

10.Transfer Clutch Pressure Test

A: NOTE

For inspection, refer to the "4AT" section. <Ref. to 4AT-35, Transfer Clutch Pressure Test.>

Transfer Clutch Pressure Test

NOT FOR RESALE

Transfer Clutch Pressure gnit to you by Eris Studios NOT FOR RESALE