

Brought to you by Eris Studios
NOT FOR RESALE

TRANSFER CASE

1. General Description

A: NOTE

For general description, refer to “4AT” or “5MT” section.

4AT model:

<Ref. to 4AT-2, General Description.>

5MT model:

<Ref. to 5MT-2, General Description.>

2. Transfer Case and Extension Case Assembly

A: NOTE

For removal, installation and inspection, refer to the "5MT" section. <Ref. to 5MT-38, Transfer Case and Extension Case Assembly.>

3. Transfer Clutch

A: NOTE

For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-74, Transfer Clutch.>

4. Extension Case

A: NOTE

For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-72, Extension Case.>

5. Oil Seal

A: NOTE

For removal, installation and inspection, refer to the "4AT" or "5MT" section.

4AT model:

<Ref. to 4AT-45, Extension Case Oil Seal.> <Ref. to 4AT-46, Differential Side Retainer Oil Seal.>

5MT model:

<Ref. to 5MT-33, Oil Seal.> <Ref. to 5MT-34, Differential Side Retainer Oil Seal.>

6. Transfer Drive Gear

A: NOTE

For removal, installation and inspection, refer to the "5MT" section. <Ref. to 5MT-42, Transfer Drive Gear.>

7. Transfer Driven Gear

A: NOTE

For removal, installation and inspection, refer to the "5MT" section. <Ref. to 5MT-44, Transfer Driven Gear.>

8. Reduction Drive Gear

A: NOTE

For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-81, Reduction Drive Gear.>

9. Reduction Driven Gear

A: NOTE

For removal, installation and inspection, refer to the "4AT" section. <Ref. to 4AT-79, Reduction Driven Gear.>

10.Center Differential

A: NOTE

For removal, installation and inspection, refer to the "5MT" section. <Ref. to 5MT-46, Center Differential.>

Transfer Clutch Pressure Test

TRANSFER CASE

11. Transfer Clutch Pressure Test

A: NOTE

For inspection, refer to the "4AT" section. <Ref. to 4AT-34, Transfer Clutch Pressure Test.>

Brought to you by Eris Studios
NOT FOR RESALE