## 24.Piston

## A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4DO)-243, RE-MOVAL, Cylinder Block.> <Ref. to ME(H4DO)-261, INSTALLATION, Cylinder Block.>