

## **3. Engine Oil**

### **A: INSPECTION**

Refer to "LU" section for engine oil inspection.  
<Ref. to LU(H4DO)-9, INSPECTION, Engine Oil.>

### **B: REPLACEMENT**

Refer to "LU" section for engine oil replacement.  
<Ref. to LU(H4DO)-10, REPLACEMENT, Engine Oil.>