## 6. V-belt

## A: INSPECTION

Refer to "ME" section for V-belt inspection. <Ref. to ME(H4DO)-75, V-belt.>

## **B: REPLACEMENT**

Refer to "ME" section for V-belt replacement. <Ref. to ME(H4DO)-75, V-belt.>