

System Operation Check Mode

ENGINE (DIAGNOSTICS)

14. System Operation Check Mode

A: OPERATION

CAUTION:

After executing the system operation check mode, execute the Clear Memory Mode. <Ref. to EN(H4DO)(diag)-57, OPERATION, Clear Memory Mode.>

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.