

## **8. Fuel Filter**

### **A: REPLACEMENT**

For fuel filter replacement procedure, refer to “FU” section. <Ref. to FU(H4DO)-162, Fuel Filter.>

### **B: INSPECTION**

Replace if the filter is clogged, or time for replacement has come.