

Air Breather Hose


CONTINUOUSLY VARIABLE TRANSMISSION

24. Air Breather Hose

A: REMOVAL


1. FRONT DIFFERENTIAL SIDE

- 1) Remove the air intake boot assembly. <Ref. to IN(H4DO)-12, REMOVAL, Air Intake Boot.>
- 2) Remove the air breather hose.

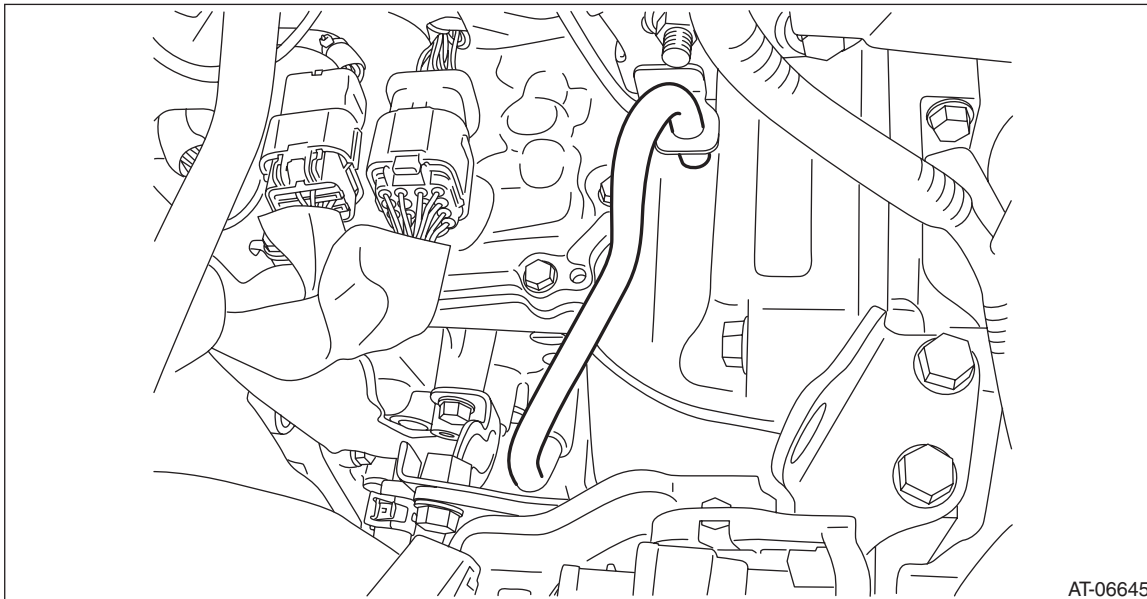

2. TRANSMISSION CASE SIDE


- 1) Remove the transmission assembly. <Ref. to CVT-56, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

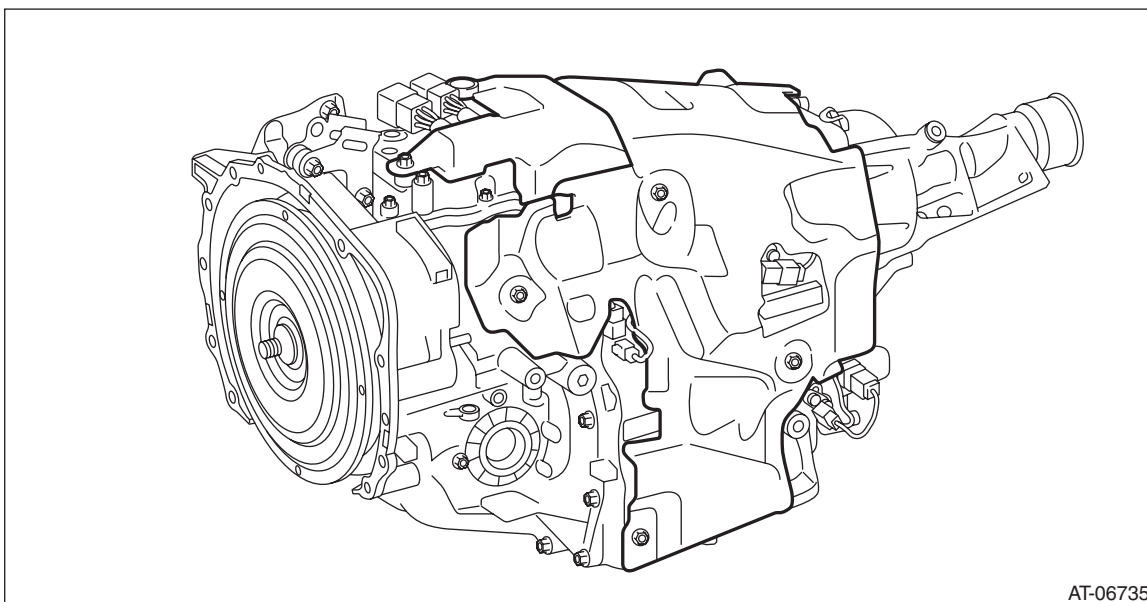

Air Breather Hose

CONTINUOUSLY VARIABLE TRANSMISSION

3) Remove the air breather hose.

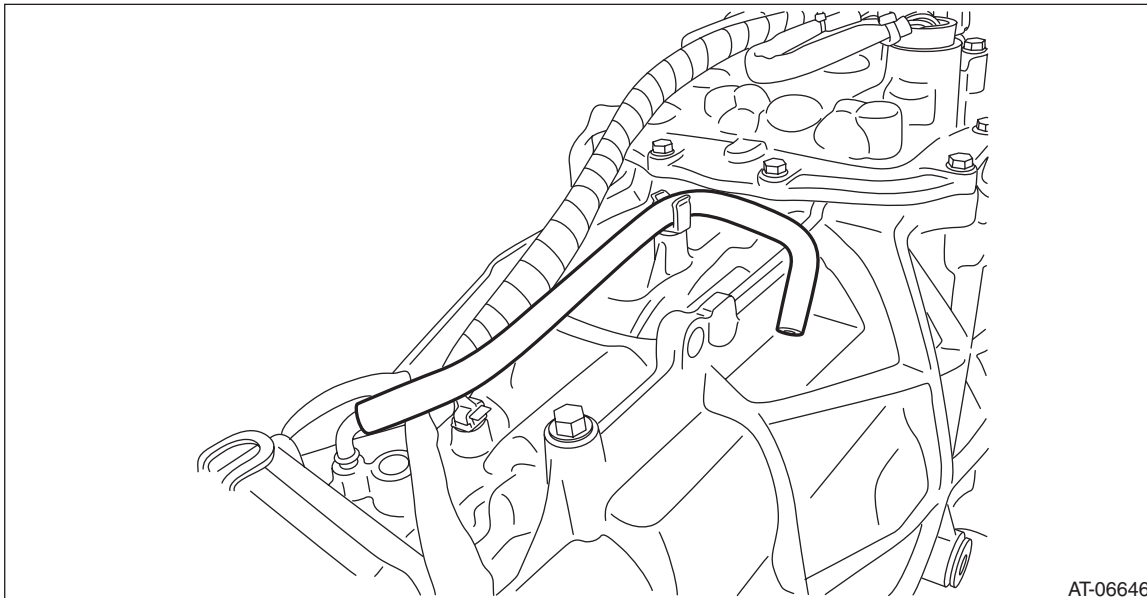

AT-06646


B: INSTALLATION

1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

Insertion depth A:

16 — 36 mm (0.63 — 1.42 in)

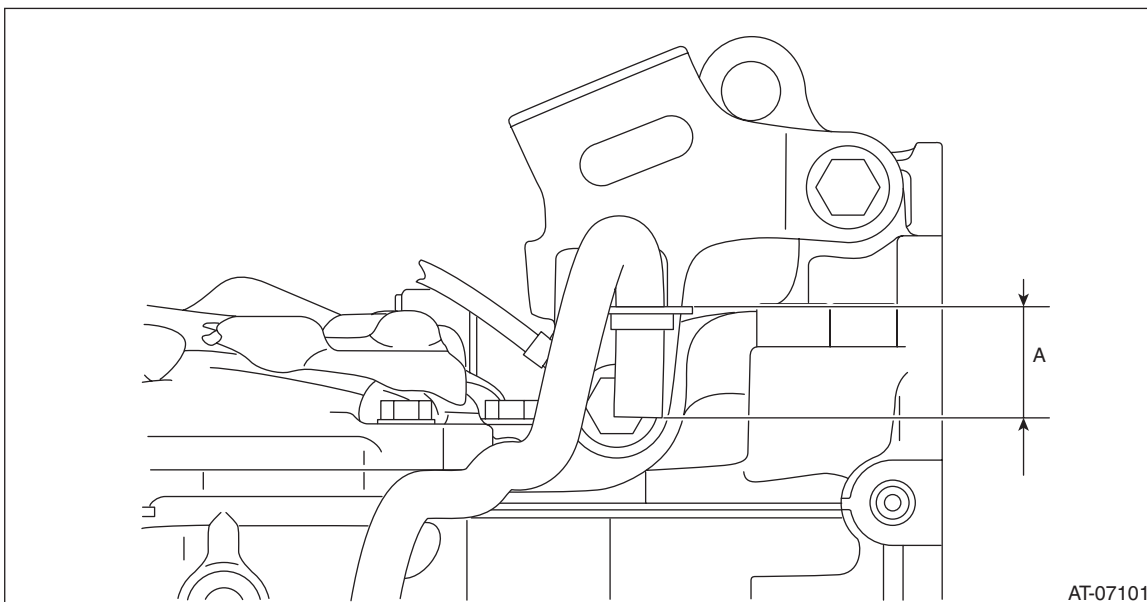

AT-07101

2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

Tightening torque:

Transmission case cover:

8 N·m (0.8 kgf-m, 5.9 ft-lb)

C: INSPECTION

Check the hose for peeling, crack or clogging.