

# Variator Chain

CONTINUOUSLY VARIABLE TRANSMISSION

---

## 38. Variator Chain

### A: REMOVAL

For removal of variator chain, refer to “Primary Pulley and Secondary Pulley”. <Ref. to CVT-210, REMOVAL, Primary Pulley and Secondary Pulley.>

### B: INSTALLATION

For installation of variator chain, refer to “Primary Pulley and Secondary Pulley”. <Ref. to CVT-217, INSTALLATION, Primary Pulley and Secondary Pulley.>

### C: INSPECTION

Check the variator chain for damage and wear.