

Wheel Alignment

REAR SUSPENSION

2. Wheel Alignment

A: INSPECTION

NOTE:

Measure and adjust the front and rear wheel alignment at a time. Refer to “Wheel Alignment” in “FRONT SUSPENSION” section for measurement or adjustment of wheel alignment.

- Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.>
- Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.>