


Full Wheel Cap

WHEEL AND TIRE SYSTEM

4. Full Wheel Cap

A: REMOVAL

Insert a remover into the notch located diagonally to the valve, and remove the cap by prying the remover to the tire side.

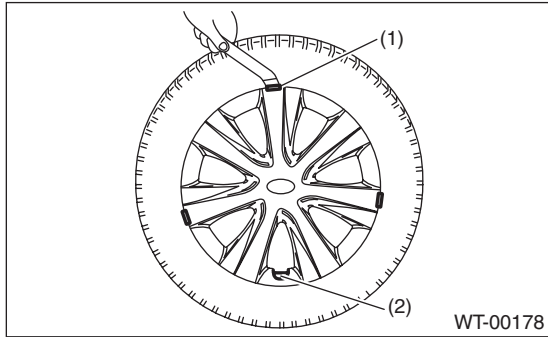


(1) Cutout portion

(2) Valve hole

B: INSTALLATION

1) Align the valve with the valve hole in the hubcap.

2) Install the hubcap by tapping it in the order from (1) to (3) described in the figure.

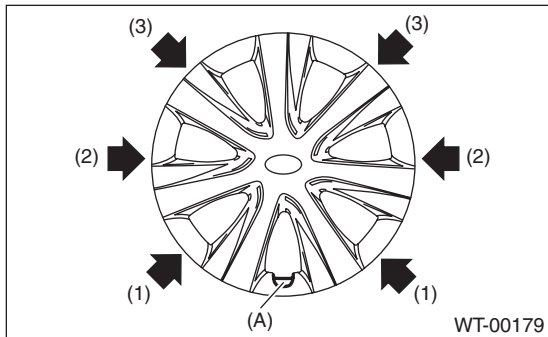

(A) Valve hole

C: INSPECTION

Check for damage on the hubcap.