

General Diagnostic Table

6. General Diagnostic Table

A: INSPECTION

| Symptoms | Possible cause | Corrective action |
|---------------------------------------|-----------------------------|---|
| Wheel is out of balance. | Improperly inflated tire. | Adjust the tire pressure. |
| | Uneven wear | Check the tire referring to "Abnormal tire wear" in this table, carry out the procedure and replace the tire. |
| | Front wheel alignment | Check or adjust the front wheel alignment. <ul style="list-style-type: none"> • Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.> • Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |
| | Rear wheel alignment | Check or adjust the rear wheel alignment. <ul style="list-style-type: none"> • Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.> • Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |
| | Front strut | Check the front strut. <Ref. to FS-48, INSPECTION, Front Strut.> |
| | Rear shock absorber | Check the rear shock absorber. <Ref. to RS-32, INSPECTION, Rear Shock Absorber.> |
| | Housing ASSY - front axle | Check the housing assembly - front axle. <Ref. to DS-34, INSPECTION, Front Hub Unit Bearing.> |
| | Hub unit COMPL - front axle | Check the hub unit COMPL - front axle. <Ref. to DS-34, INSPECTION, Front Hub Unit Bearing.> |
| | Hub unit COMPL - rear axle | Check the hub unit COMPL - rear axle. <Ref. to DS-56, INSPECTION, Rear Hub Unit Bearing.> |
| Vehicle is abnormally out of balance. | Improperly inflated tire. | Adjust the tire pressure. |
| | Uneven wear | Check the tire referring to "Abnormal tire wear" in this table, carry out the procedure and replace the tire. |
| | Front stabilizer | Inspect the front stabilizer. |
| | Front wheel alignment | Check or adjust the front wheel alignment. <ul style="list-style-type: none"> • Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.> • Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |
| | Rear wheel alignment | Check or adjust the rear wheel alignment. <ul style="list-style-type: none"> • Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.> • Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |
| Abnormal wheel vibration | Improperly inflated tire. | Adjust the tire pressure. |
| | Uneven wear | Check the tire referring to "Abnormal tire wear" in this table, carry out the procedure and replace the tire. |
| | Improper wheel balancing | Check the wheel balance. <Ref. to WT-6, WHEEL BALANCING, INSPECTION, Tire and Wheel.> |
| | Housing ASSY - front axle | Check the housing assembly - front axle. <Ref. to DS-34, INSPECTION, Front Hub Unit Bearing.> |
| | Hub unit COMPL - front axle | Check the hub unit COMPL - front axle. <Ref. to DS-34, INSPECTION, Front Hub Unit Bearing.> |
| | Hub unit COMPL - rear axle | Check the hub unit COMPL - rear axle. <Ref. to DS-56, INSPECTION, Rear Hub Unit Bearing.> |

General Diagnostic Table

WHEEL AND TIRE SYSTEM

| Symptoms | Possible cause | Corrective action |
|--------------------|---------------------------|---|
| Abnormal tire wear | Improperly inflated tire. | Adjust the tire pressure. |
| | Improper wheel balancing | Check the wheel balance. <Ref. to WT-6, WHEEL BALANCING, INSPECTION, Tire and Wheel.> |
| | Front wheel alignment | Check or adjust the front wheel alignment. <ul style="list-style-type: none">• Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.>• Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |
| | Rear wheel alignment | Check or adjust the rear wheel alignment. <ul style="list-style-type: none">• Inspection: <Ref. to FS-7, INSPECTION, Wheel Alignment.>• Adjustment: <Ref. to FS-12, ADJUSTMENT, Wheel Alignment.> |

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

TPM(diag)

| | Page |
|--|-------------|
| 1. Basic Diagnostic Procedure | 2 |
| 2. General Description | 3 |
| 3. Electrical Component Location | 5 |
| 4. Control Module I/O Signal | 6 |
| 5. Subaru Select Monitor | 7 |
| 6. Read Diagnostic Trouble Code (DTC) | 10 |
| 7. Clear Memory Mode | 11 |
| 8. Read Current Data | 12 |
| 9. Register Transmitter (ID) | 13 |
| 10. Display Transmitter (ID) | 14 |
| 11. Inspection Mode | 15 |
| 12. Tire Pressure Warning Light / Trouble Indicator Light Illumination Pattern ... | 16 |
| 13. List of Diagnostic Trouble Code (DTC) | 20 |
| 14. Diagnostic Procedure with Diagnostic Trouble Code (DTC) | 22 |
| 15. General Diagnostic Table | 31 |