

Display Transmitter (ID)

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

10.Display Transmitter (ID)

A: OPERATION

For the operation procedure, refer to the “PC application help for Subaru Select Monitor”.