

25.A/C Filter

A: REPLACEMENT

Refer to "AC" section for A/C filter replacement.
<Ref. to AC-99, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS) FU(H4DO)

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(H4DO)

INTAKE (INDUCTION) IN(H4DO)

MECHANICAL ME(H4DO)

EXHAUST EX(H4DO)

COOLING CO(H4DO)

LUBRICATION LU(H4DO)

SPEED CONTROL SYSTEMS SP(H4DO)

IGNITION IG(H4DO)

STARTING/CHARGING SYSTEMS SC(H4DO)

ENGINE (DIAGNOSTICS) EN(H4DO)(diag)

GENERAL DESCRIPTION GD(H4DO)

FUEL INJECTION (FUEL SYSTEMS)

FU(H4DO)

	Page
1. General Description	2
2. Throttle Body	18
3. Intake Manifold	23
4. Engine Coolant Temperature Sensor	47
5. Engine Oil Temperature Sensor	49
6. Crankshaft Position Sensor	51
7. Crankshaft Position Sensor Plate	56
8. Camshaft Position Sensor	57
9. Oil Control Solenoid	62
10. Knock Sensor	66
11. Throttle Position Sensor	70
12. Mass Air Flow and Intake Air Temperature Sensor	71
13. Manifold Absolute Pressure Sensor	74
14. EGR Control Valve	77
15. Fuel Injector	78
16. Tumble Generator Valve Assembly	85
17. Tumble Generator Valve Actuator	92
18. Front Oxygen (A/F) Sensor	94
19. Rear Oxygen Sensor	98
20. Engine Control Module (ECM)	102
21. Main Relay	105
22. Fuel Pump Relay	107
23. Electronic Throttle Control Relay	109
24. Fuel	112
25. Fuel Tank	116
26. Fuel Filler Pipe	132
27. Fuel Pump	148
28. Fuel Level Sensor	153
29. Fuel Sub Level Sensor	155
30. Fuel Filter	162
31. Fuel Delivery and Evaporation Lines	168
32. Fuel System Trouble in General	174