


## 2. Relay and Fuse

### A: LOCATION

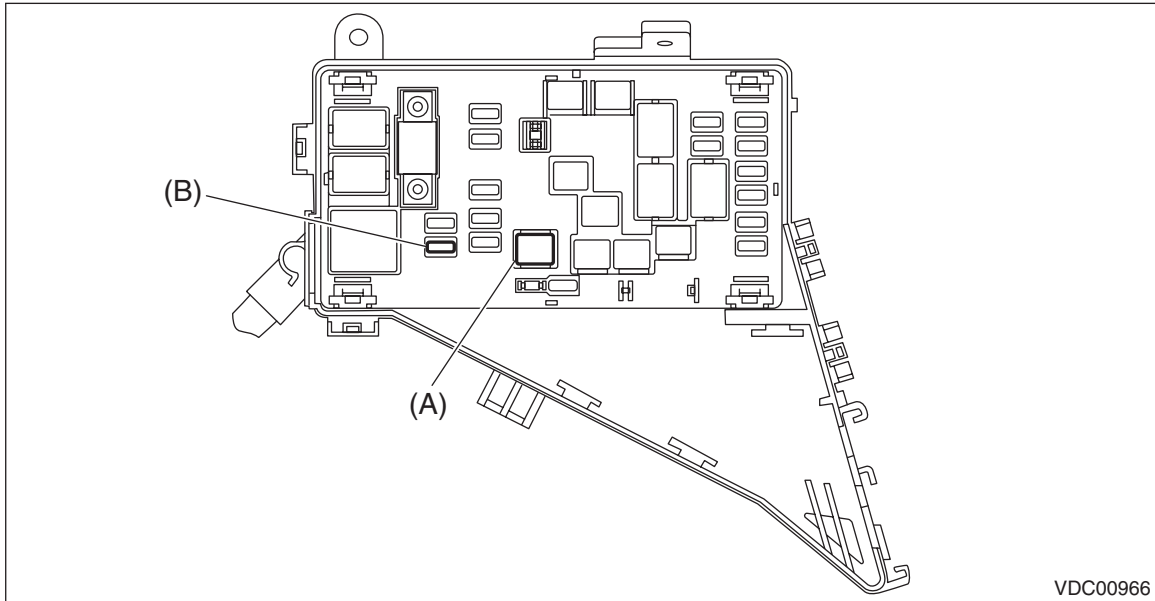

VDC00966

Main fuse box	Fuse 50A (VDC CM&H/U)	(A)
	Fuse 30A (VDC CM&H/U)	(B)

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.