## 3. General Description

#### A: CAUTION

# 1. SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the ABS wheel speed sensor and VDCCM&H/U.

#### **CAUTION:**

- Do not use electrical test equipment on wiring harness and connector circuits of the airbag system.
- Be careful not to damage the airbag system wiring harness when servicing the ABS wheel speed sensor and VDCCM&H/U.

#### **B: INSPECTION**

Before performing diagnosis, check the following items which might affect VDC problems.

#### 1. BATTERY

Measure the battery voltage and check electrolyte.

### Standard voltage:

12 V or more

#### Specific gravity:

1.260 or more

#### 2. GROUND

Check the tightening torque of ground (GB-5) bolt of VDC.

#### Tightening torque:

13 N·m (1.3 kgf-m, 9.6 ft-lb)

#### 3. BRAKE FLUID

- 1) Check the brake fluid level.
- 2) Check the brake fluid for leaks.

#### 4. HYDRAULIC UNIT

Check the hydraulic unit.

- When using the brake tester <Ref. to VDC-13, CHECKING THE HYDRAULIC UNIT ABS OPERATION WITH THE BRAKE TESTER, INSPECTION, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- When not using the brake tester <Ref. to VDC-12, CHECKING THE HYDRAULIC UNIT ABS OP-ERATION BY PRESSURE GAUGE, INSPEC-TION, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

#### 5. BRAKE DRAG

Check for brake drag.

#### 6. BRAKE PAD AND ROTOR

Check the brake pad and rotor.

- Front <Ref. to BR-17, INSPECTION, Front Brake Pad.> <Ref. to BR-19, INSPECTION, Front Disc Botor.>
- Rear <Ref. to BR-31, INSPECTION, Rear Brake Pad.> <Ref. to BR-34, INSPECTION, Rear Disc Rotor.>

#### 7. TIRES

Check the tire specifications, tire wear and air pressure. <Ref. to WT-2, SPECIFICATION, General Description.>

## **General Description**

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## **C: PREPARATION TOOL**

## 1. SPECIAL TOOL

| ILLUSTRATION | TOOL NUMBER | DESCRIPTION                      | REMARKS                                         |
|--------------|-------------|----------------------------------|-------------------------------------------------|
|              | 1B022XU0    | SUBARU SELECT<br>MONITOR III KIT | Used for troubleshooting the electrical system. |
|              |             |                                  |                                                 |
| ST1B022XU0   |             |                                  |                                                 |

## 2. GENERAL TOOL

| TOOL NAME      | REMARKS                                             |  |
|----------------|-----------------------------------------------------|--|
| Circuit tester | Used for measuring resistance, voltage and current. |  |
| Oscilloscope   | Used for measuring the sensor.                      |  |