

## 13. Brake Pipe

### A: REMOVAL

#### CAUTION:

- Yellow connectors and harnesses with yellow tapes around them are the connectors and harnesses for the airbag system. Using a tester above such circuits may cause malfunction of airbag system. Follow the cautions for “AIRBAG SYSTEM” in this case. <Ref. to AB-11, CAUTION, General Description.>
- Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
- When removing the brake pipe, do not bend.

#### NOTE:

The airbag system wiring harness is routed near the center brake pipe.

### B: INSTALLATION

#### CAUTION:

- Yellow connectors and harnesses with yellow tapes around them are the connectors and harnesses for the airbag system. Using a tester above such circuits may cause malfunction of airbag system. Follow the cautions for “AIRBAG SYSTEM” in this case. <Ref. to AB-11, CAUTION, General Description.>
- Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
- When installing the brake pipe, do not bend.
- After installing the brake pipe and hose, perform air bleed.
- After installing the brake hoses, make sure that they do not contact the tires or suspension assembly, etc.

#### NOTE:

The airbag system wiring harness is routed near the center brake pipe.

#### *Tightening torque:*

*Front brake pipes & hoses: <Ref. to BR-8, FRONT BRAKE PIPES AND HOSES, COMPONENT, General Description.>*

*Center & rear brake pipes and hoses: <Ref. to BR-9, CENTER AND REAR BRAKE PIPES AND HOSES, COMPONENT, General Description.>*

### C: INSPECTION

Check the pipe for crack and damage, and also check the connection for fluid leakage. If any faulty is found, repair or replace the relevant part.

#### NOTE:

Use a mirror when inspecting back sides and other locations which are hard to see.