


Power Steering Control Module

POWER ASSISTED SYSTEM (POWER STEERING)

7. Power Steering Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the power steering control module.
 - (1) Disconnect the connector of the power steering control module.
 - (2) Remove the nuts, and remove the power steering control module.

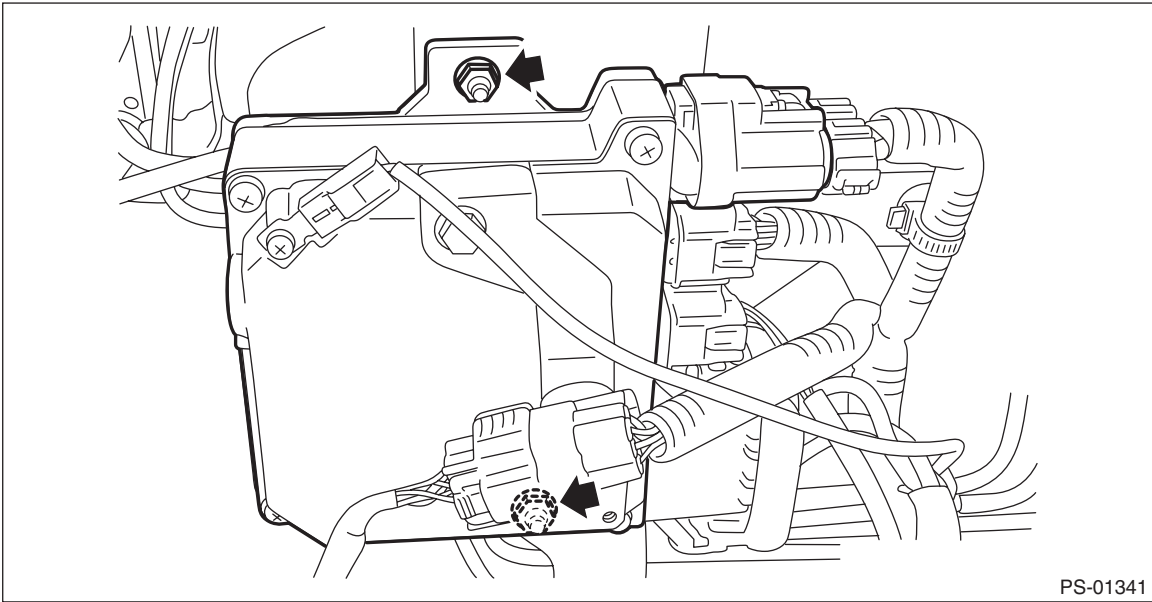

PS-01341

B: INSTALLATION

- 1) Install the power steering control module.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

- 2) Connect the harness connector.

CAUTION:

Make sure that the connector is securely locked.

- 3) Attach the harness bracket.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)