POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

• For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".

• For details concerning the DTC, refer to "List of Diagnostic Trouble Code (DTC)". <Ref. to PS(di-ag)-24, List of Diagnostic Trouble Code (DTC).>