


Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


9. Blower Motor Unit Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-67, REMOVAL, Glove Box.>
- 3) Remove the engine control module (ECM).
 - (1) Release the lock and remove the relay holder.
 - (2) Remove the harness clip, and disconnect the connector.

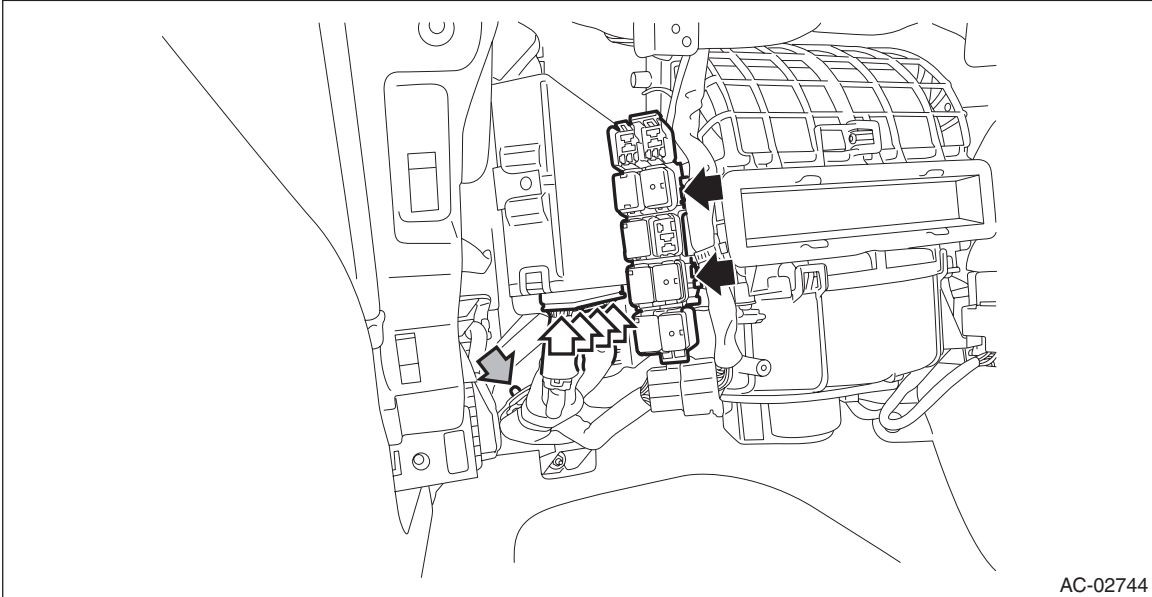


- (3) Remove the nut (a).
- (4) Loosen the bolt (b), and remove the engine control module (ECM).

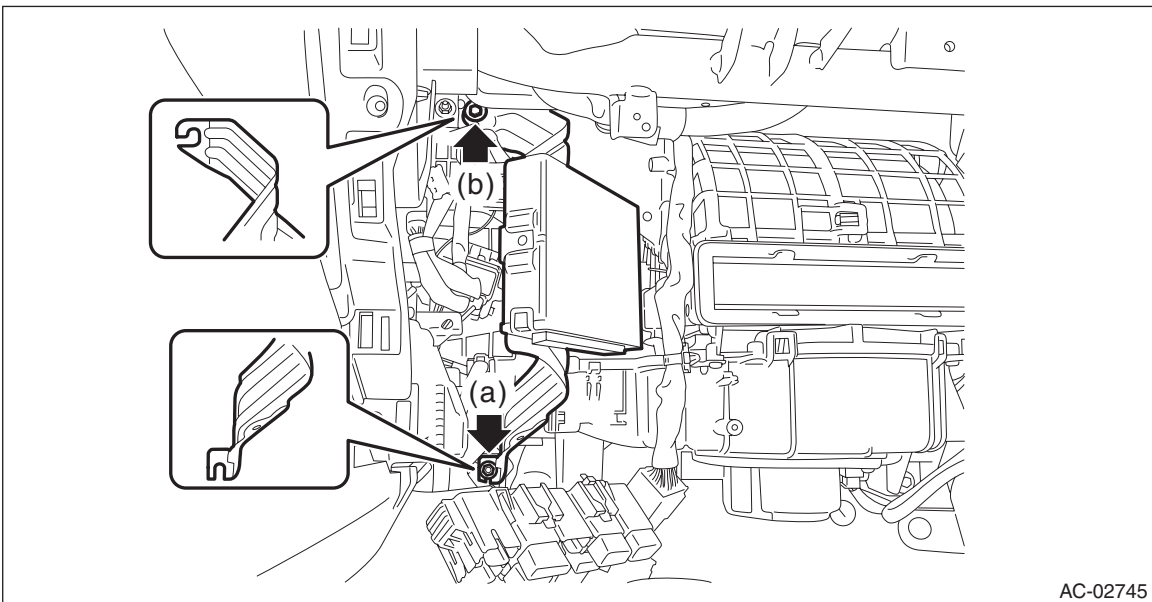

Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


- 4) Remove the blower motor unit assembly.
 - (1) Release the claws, and then remove the grille assembly - ventilation RH.
 - (2) Disconnect the blower motor relay and each connector.

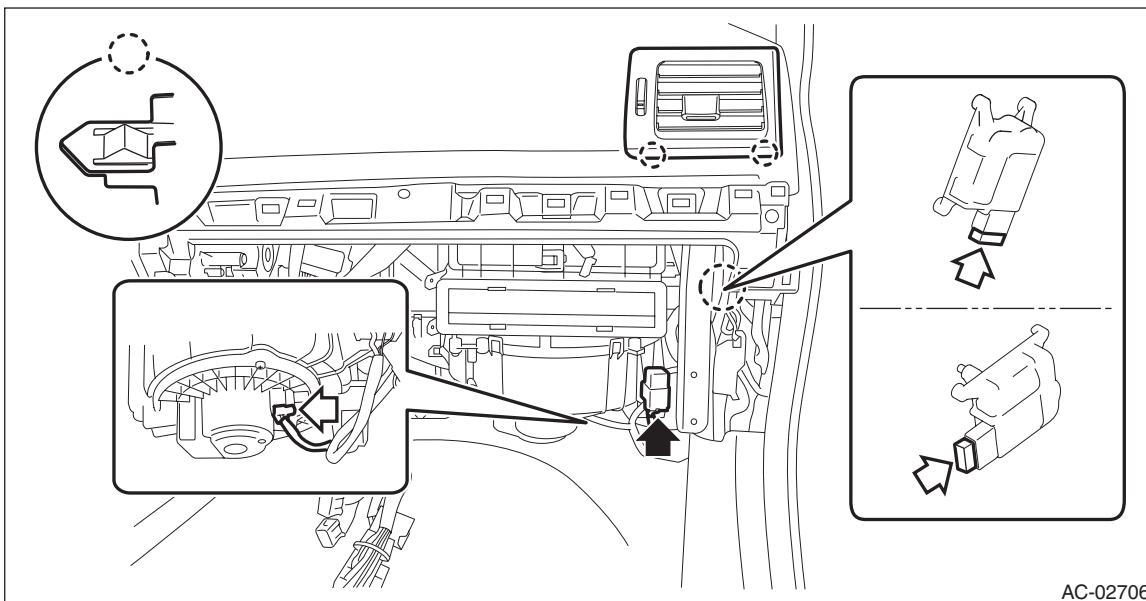

- (3) Remove the bolts and nuts to remove blower motor unit assembly.

NOTE:

Remove the RH upper nut from the mounting portion of the grille assembly - ventilation RH.

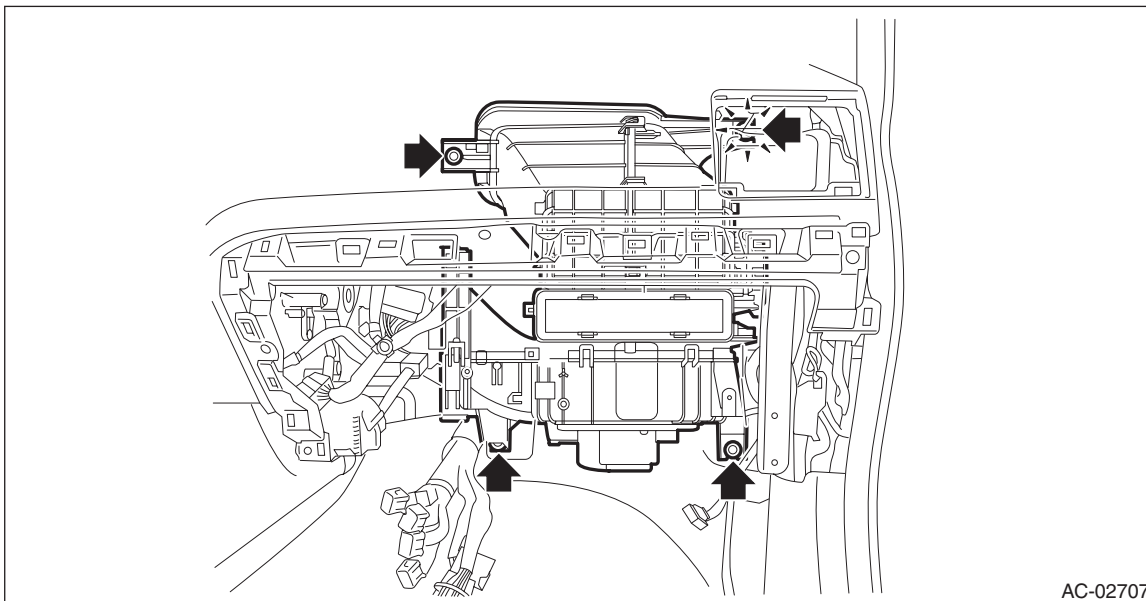

B: INSTALLATION

CAUTION:

After installing the grille assembly - ventilation RH, check that the air vent grille of the grille assembly - ventilation RH is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

Tightening torque:

Blower motor unit: <Ref. to AC-10, BLOWER MOTOR UNIT, COMPONENT, General Description.>

Engine control module (ECM): 7.5 N·m (0.76 kgf·m, 5.5 ft·lb)