


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the blower - motor.
 - (1) Disconnect the connector.
 - (2) Remove the screws and detach the blower - motor.

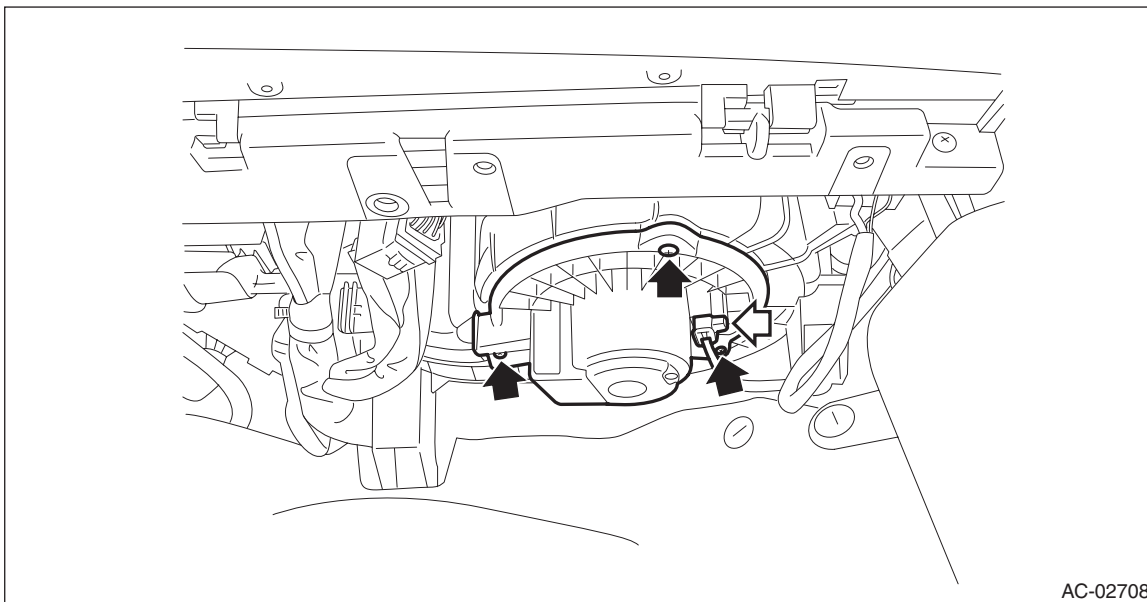

AC-02708

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

UNIT INSPECTION

- 1) Check the motor operation when battery voltage is applied between the terminals of motor.

Terminal No.	Inspection conditions	Specification	Connection diagram
2 (+) — 1 (-)	Connect battery to the terminals	Speed	<p>A schematic diagram showing a battery with a positive (+) terminal and a negative (-) terminal. Two wires connect the battery to a motor terminal block. Terminal 1 is connected to the positive terminal, and terminal 2 is connected to the negative terminal. The terminal block is shown with terminals 1 and 2 labeled.</p>

AC-02797

- 2) If it does not operate normally, replace the blower - motor.