

Power Transistor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


11. Power Transistor (Auto A/C Model)

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-67, REMOVAL, Glove Box.>
- 3) Remove the screws and remove the duct - foot RH.

NOTE:

Remove the connector and clip of the motor - actuator mix RH, and move the harness aside.

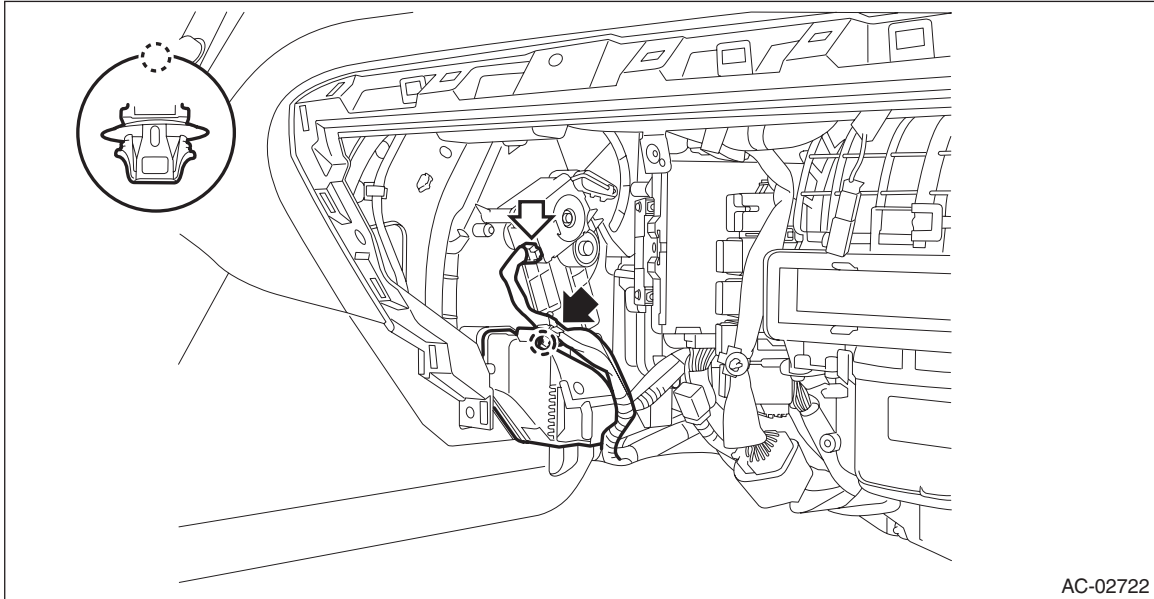

- 4) Remove the power transistor.
 - (1) Disconnect the connector.
 - (2) Remove the power transistor while pressing the power transistor body claw part and sliding it.

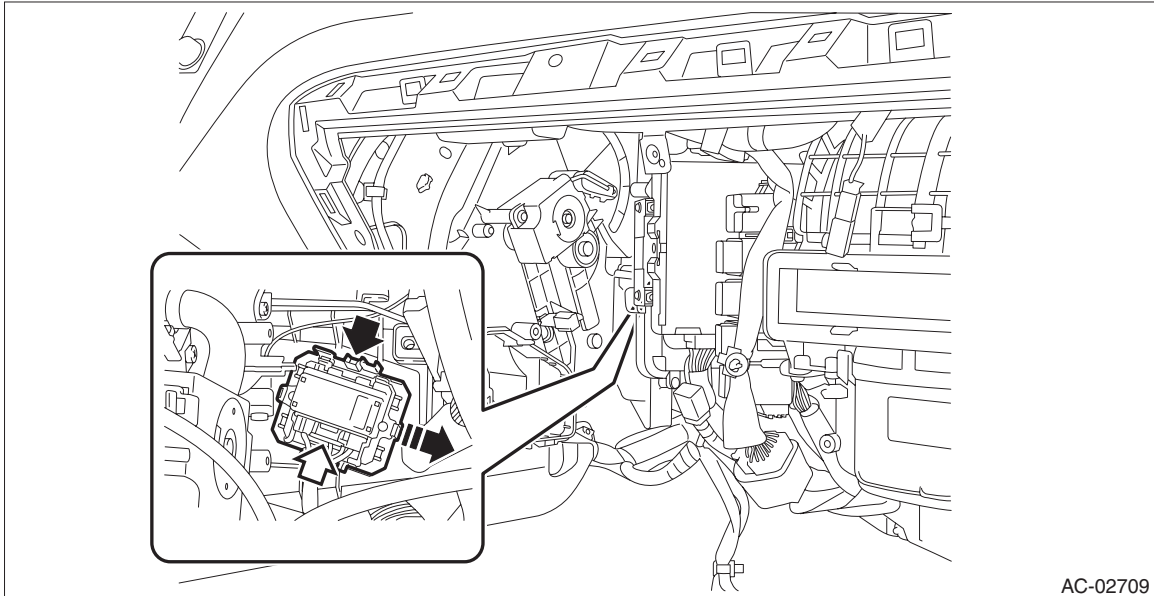

B: INSTALLATION

Install each part in the reverse order of removal.