


Heater Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

30.Heater Duct

A: REMOVAL

- 1) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 2) Remove the instrument panel assembly. <Ref. to EI-74, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the duct - rear heater.
 - (1) Lift the floor carpet.
 - (2) Remove the clips, and remove the duct - rear heater CTR (A).
 - (3) Release the claws, and remove the duct - rear heater (B) on LH and RH sides.

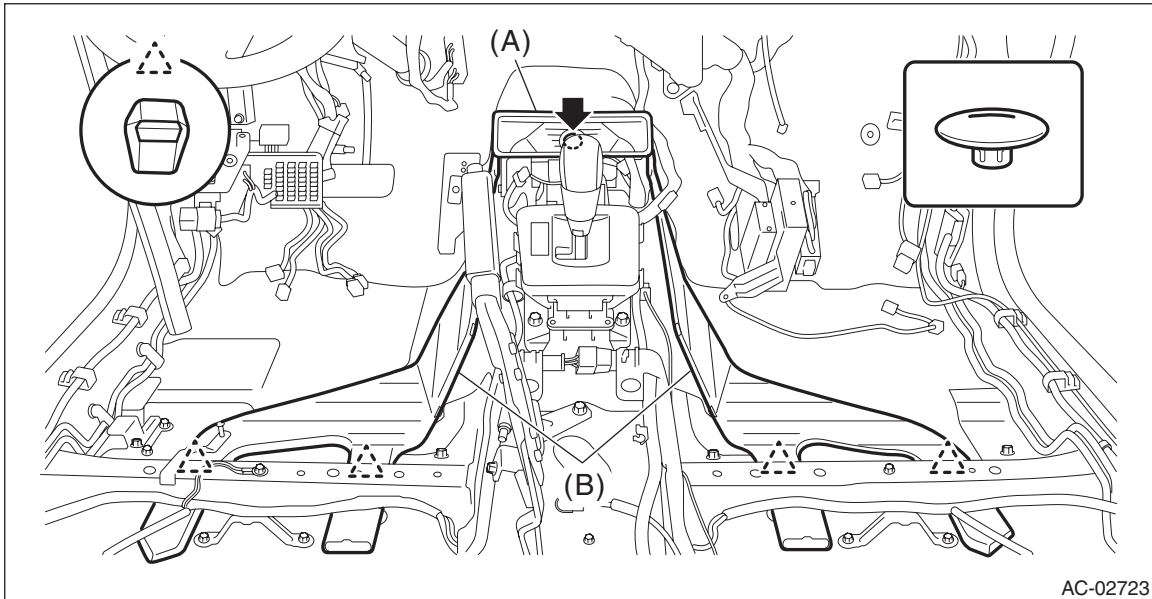

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Front Seat" and "Instrument Panel Assembly".

- Front seat: <Ref. to SE-8, INSTALLATION, Front Seat.>
- Instrument panel assembly: <Ref. to EI-92, INSTALLATION, Instrument Panel Assembly.>