

## **Read Diagnostic Trouble Code (DTC)**

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

---

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.