

4. Electrical Component Location

A: LOCATION

XV model

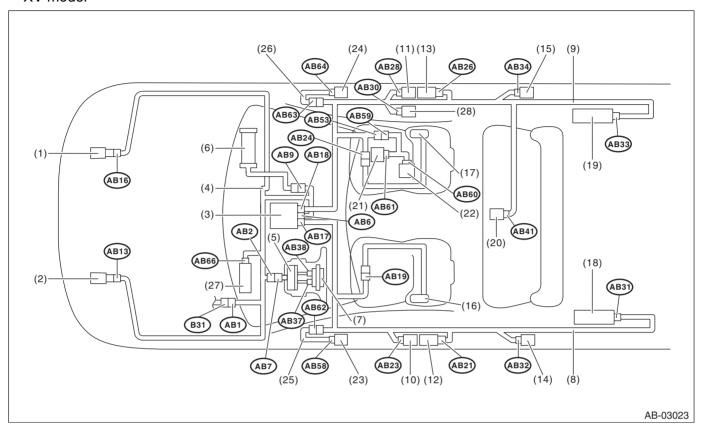

Except for XV model

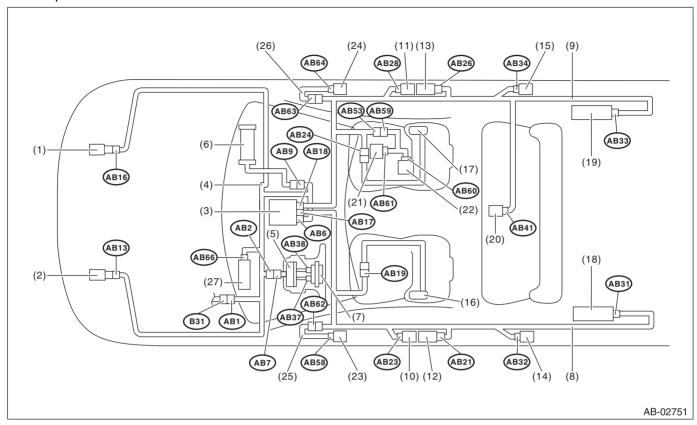

- (1) Front sub sensor (RH)
- (2) Front sub sensor (LH)
- (3) Airbag control module
- (4) Airbag main harness
- (5) Roll connector
- (6) Passenger's airbag inflator
- (7) Driver's airbag inflator
- (8) Airbag rear harness (LH)
- (9) Airbag rear harness (RH)
- (10) Side airbag sensor (LH)

- (11) Side airbag sensor (RH)
- (12) Seat belt pretensioner (LH)
- (13) Seat belt pretensioner (RH)
- (14) Curtain airbag sensor (LH)
- (15) Curtain airbag sensor (RH)
- (16) Side airbag inflator (LH)
- (17) Side airbag inflator (RH)
- (18) Curtain airbag inflator (LH)
- (19) Curtain airbag inflator (RH)

- (20) Satellite safing sensor
- (21) Occupant detection control module
- (22) Buckle switch (RH)
- (23) Front door impact sensor (LH)
- (24) Front door impact sensor (RH)
- (25) Door harness (LH)
- (26) Door harness (RH)
- (27) Knee airbag inflator
- (28) Lap seat belt pretensioner (RH)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	10	4	30	4	4	2	2	15 or 24	15 or 24	4	2	4
Color	Gray	Yellow	Yellow	Yellow	Black	Yellow						
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB24)	(AB26)	(AB28)	(AB30)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)
Pin	4	2	4	2	2	4	2	4	2	2	2	3
Color	Yellow	Black	Yellow	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Brown
Male/Female	Female	Female	Female	Female	Female							
Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)	(AB63)	(AB64)	(AB66)				
Pin	2	3	2	10	2	2	2	2				
Color	Yellow	Brown	Yellow	Black	Yellow	Yellow	Yellow	Black				
Male/Female	Female	Male	Male	Female	Female	Female	Female	Female				