

## 2. Pretensioner Connector

### A: PROCEDURE

For connectors of seat belt pretensioner, lap seat belt pretensioner and buckle switch RH, refer to “Airbag Connector” of “AIRBAG SYSTEM” section or “OCCUPANT DETECTION SYSTEM” section.

- Airbag system: <Ref. to AB-20, PROCEDURE, Airbag Connector.>
- Occupant detection system: <Ref. to OD(diag)-9, PROCEDURE, Airbag Connector.>