


Front Fog Light Bulb

LIGHTING SYSTEM

22.Front Fog Light Bulb


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screw and clips, and turn over the front side of the mud guard - front.

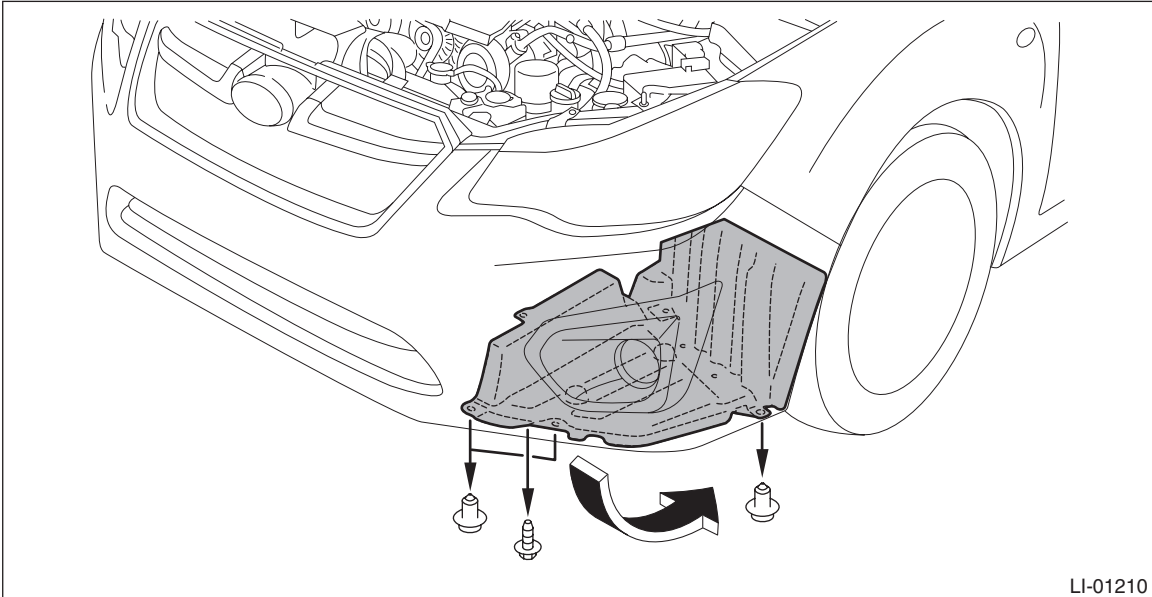

LI-01210

- 3) From the bottom of the bumper face - front, remove the front fog light bulb.
 - (1) Disconnect the connector.
 - (2) Remove the bulb.

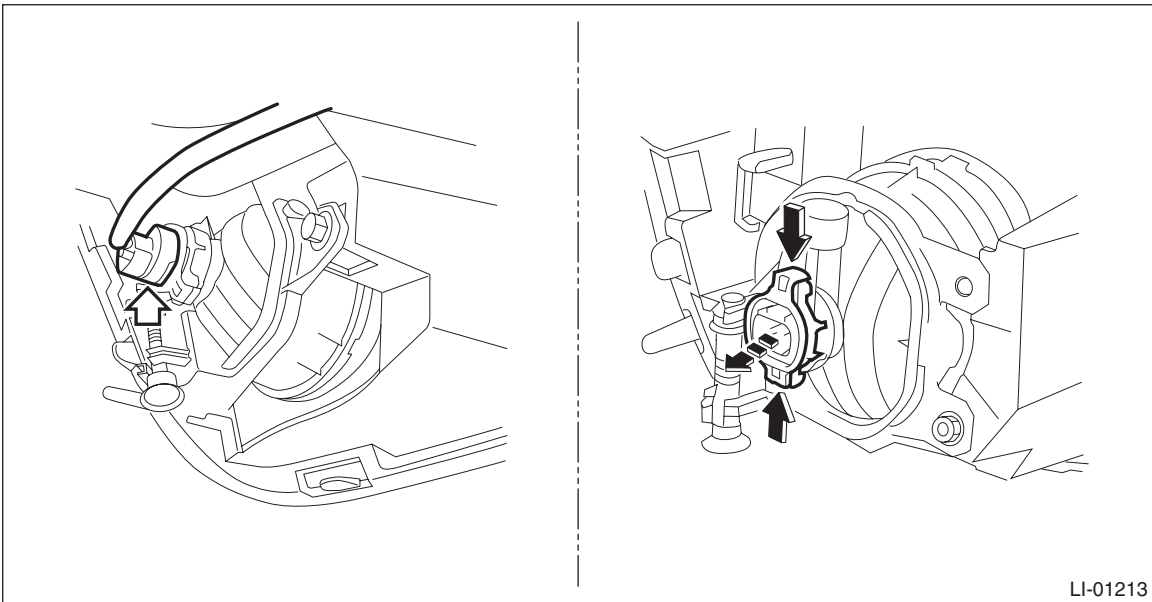

LI-01213

B: INSTALLATION

CAUTION:

After connecting the connector, make sure that the bulb is locked securely.

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.