


41. Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the switch assembly - door.
 - (1) Remove the screws, and pull out the switch assembly - door toward you.
 - (2) Disconnect the connector and remove the switch assembly - door.

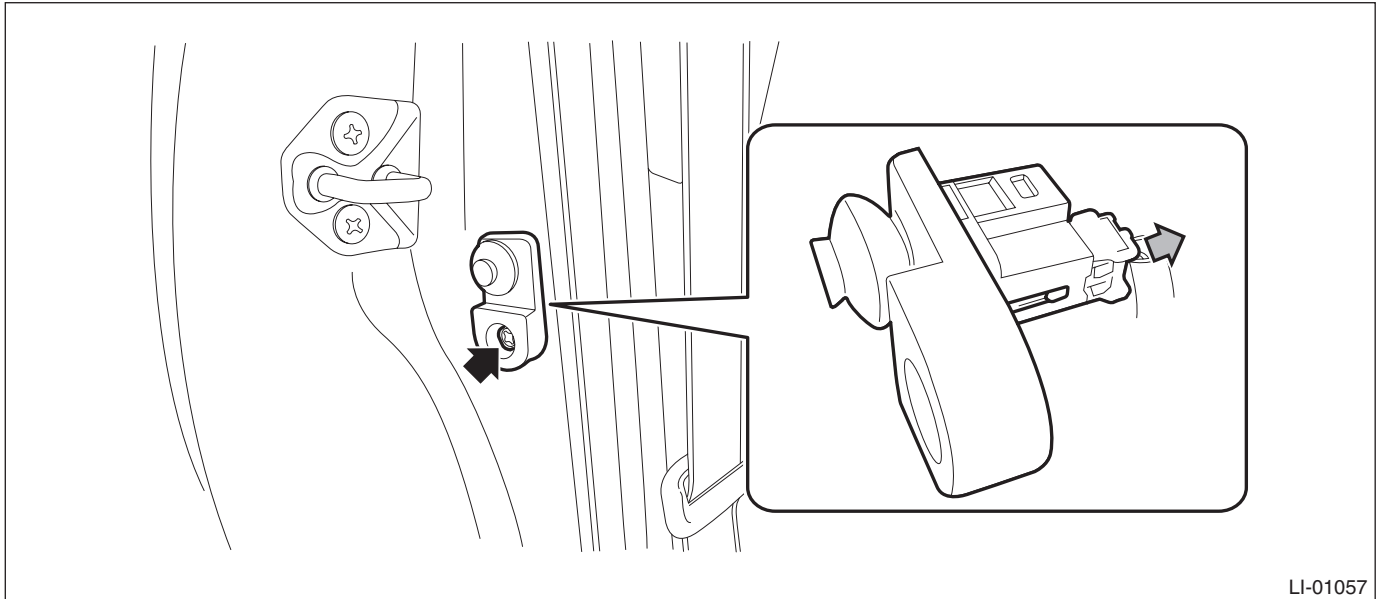

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Unit inspection

Preparation tool:

Circuit tester

- 1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
1 — 3	When door is opened	Less than 1 Ω	
	When door is closed	1 MΩ or more	

LI-01327

- 2) Replace the switch assembly - door if the inspection result is not within the standard value.

Door Switch

LIGHTING SYSTEM

AUTO HEADLIGHT BEAM LEVELER SYSTEM (DIAGNOSTICS)

AL(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	5
5. Control Module I/O Signal	6
6. Subaru Select Monitor	7
7. Read Diagnostic Trouble Code (DTC)	10
8. Clear Memory Mode	11
9. Read Current Data	12
10. List of Diagnostic Trouble Code (DTC)	13
11. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	14
12. Diagnostics with Phenomenon	18