

3. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

Refer to “Front Wiper and Washer System” in the wiring diagram. <Ref. to WI-90, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

Refer to “Rear Wiper and Washer System” in the wiring diagram. <Ref. to WI-130, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

Symptoms	Repair order
Wiper and washers do not operate.	<ol style="list-style-type: none"> 1. Wiper fuse (F/B No. 14, 15) 2. Combination switch 3. Motor assembly - wiper 4. Wiring harness
Wipers do not operate in LO or HI.	<ol style="list-style-type: none"> 1. Combination switch 2. Motor assembly - wiper 3. Wiring harness
Wipers do not operate in INT.	<ol style="list-style-type: none"> 1. Combination switch 2. Motor assembly - wiper 3. Wiring harness
Washer motor does not operate.	<ol style="list-style-type: none"> 1. Combination switch 2. Motor pump assembly - washer 3. Wiring harness
Wipers do not operate when washer switch is ON.	<ol style="list-style-type: none"> 1. Motor assembly - wiper 2. Wiring harness
Washer fluid spray does not operate properly.	<ol style="list-style-type: none"> 1. Motor pump assembly - washer 2. Hose assembly - washer 3. Nozzle - washer

C: NOTE

For operation procedures of each component of the wiper and washer system, refer to the respective sections.

- Combination switch (Wiper): <Ref. to WW-10, Combination Switch (Wiper).>
- Wiper blade: <Ref. to WW-17, Wiper Blade.>
- Front wiper arm: <Ref. to WW-27, Front Wiper Arm.>
- Front wiper motor and link: <Ref. to WW-29, Front Wiper Motor and Link.>
- Rear wiper arm: <Ref. to WW-38, Rear Wiper Arm.>
- Rear wiper motor: <Ref. to WW-40, Rear Wiper Motor.>
- Washer tank and motor: <Ref. to WW-21, Washer Tank and Motor.>
- Front washer nozzle: <Ref. to WW-33, Front Washer Nozzle.>
- Rear washer nozzle: <Ref. to WW-44, Rear Washer.>