


## Rear Wiper Arm

### WIPER AND WASHER SYSTEMS

## 10.Rear Wiper Arm

### A: REMOVAL


- 1) Pull up the cover - rear wiper arm.
- 2) Remove the nut, and remove the arm assembly - rear wiper.

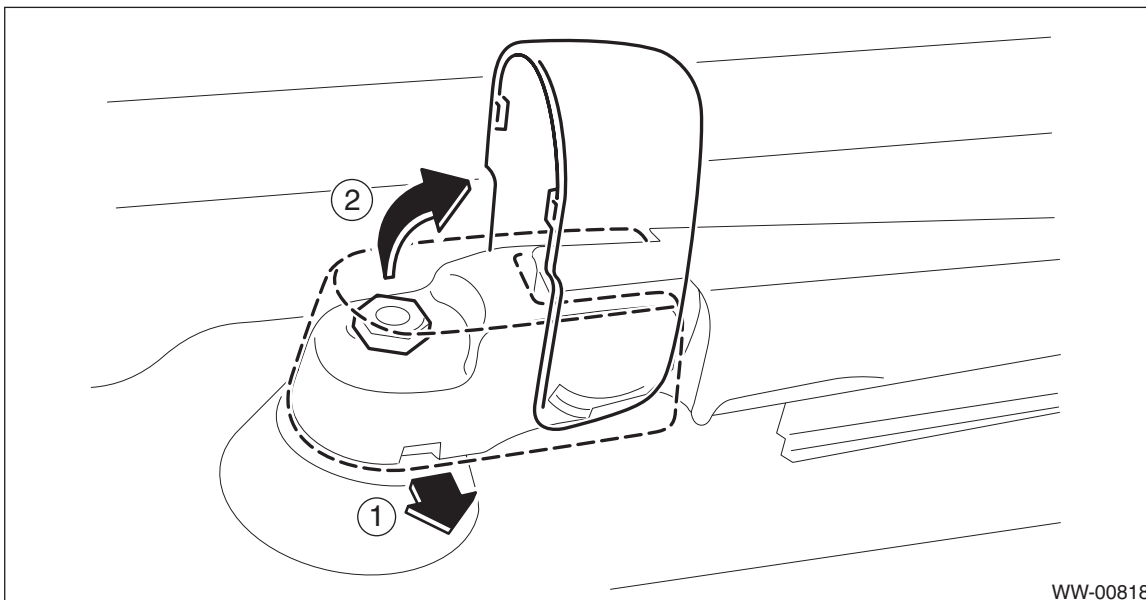

WW-00818

### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade assembly - rear wiper with the marking on the glass, and then tighten the nut to the specified torque.

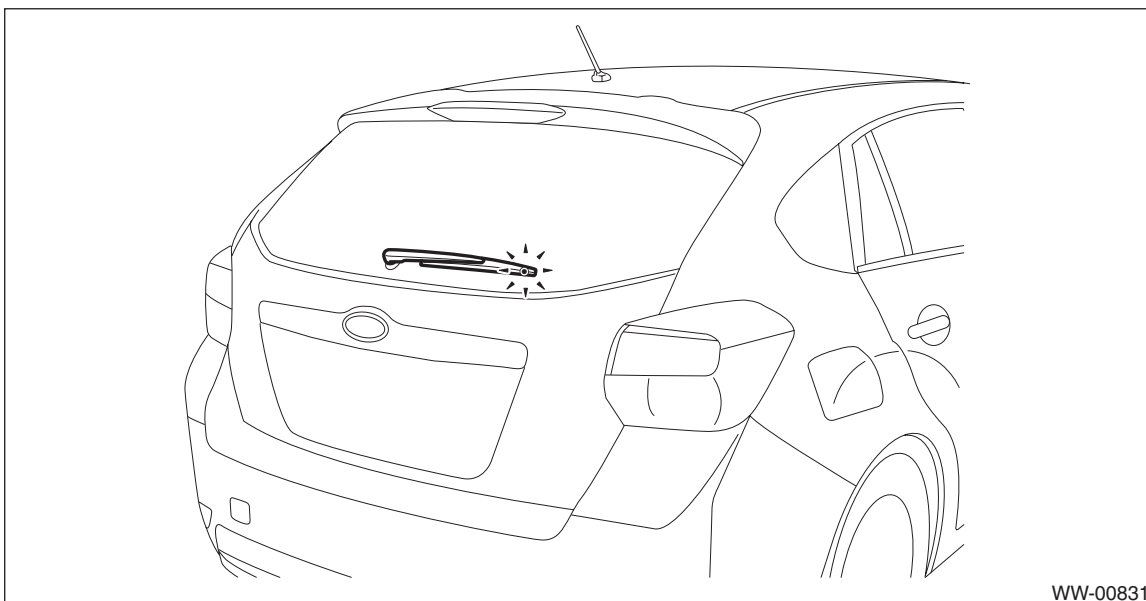

WW-00831


#### **Tightening torque:**

**8 N·m (0.82 kgf·m, 5.9 ft·lb)**

- 4) Operate the wiper to check whether the wiper blade aligns with the point mark. If not, perform installation over again.

## C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade assembly - rear wiper with the marking on the glass.

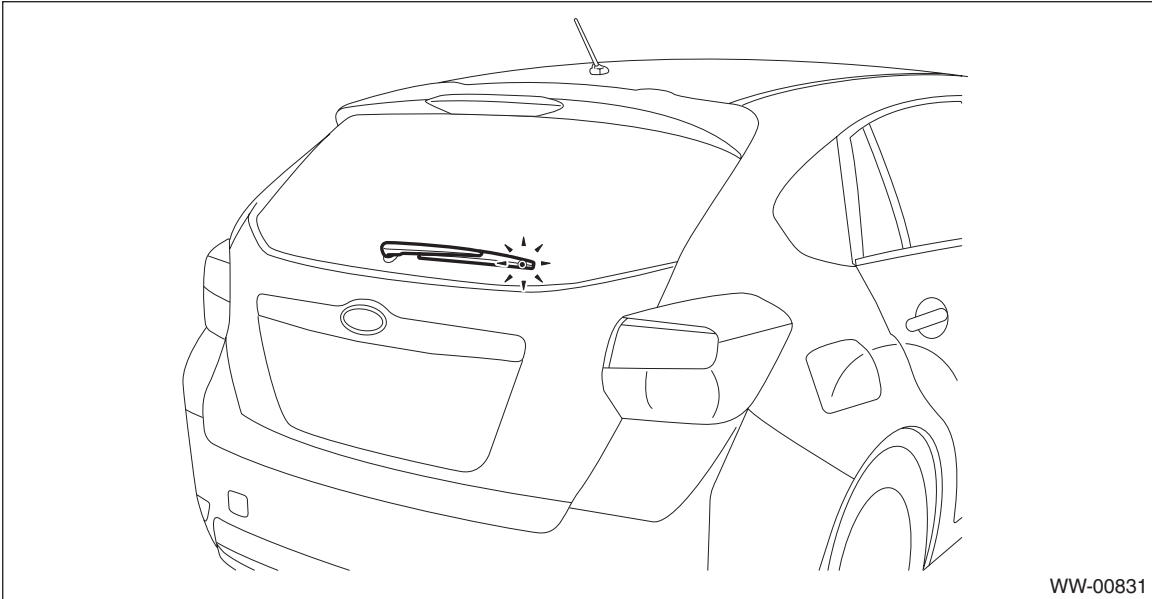

- 3) If the wiper blade is not aligned with the point mark, perform the removal of the rear wiper arm to align with the marking. <Ref. to WW-38, REMOVAL, Rear Wiper Arm.>